Quick Start Guide AWR Advantage Plus Bluetooth Pairing

Bluetooth allows for wireless headset use. To 'Pair' or Link the radio to a Bluetooth headset for the first time, follow the steps below.



Press and Hold
The Side Function 2 button
while turning the unit on.



LINK - - -Will be displayed on the screen.



Release the Side Key
Once the LED flashes blue.



Follow

The pairing instructions for the Bluetooth headset being used.

The 'Pairing' process will take approximately 35 seconds.

Once Paired

The headset will say "device is connected" and the radio screen will display 'Blue OK'



Please Note

Bluetooth Must Be Activated

On the radio using the AWR Advantage programming software for the process to work.

Bluetooth is Not Available

On the AWR Advantage two-way radio.

To Initiate a Transmission

Press the radio's push to talk button while speaking into the Bluetooth headset.

Quick Start Guide

AWR Advantage Plus Bluetooth Connect Mode

Once a Bluetooth headset has been 'Paired' to a radio, the 'Connect' mode can be used for subsequent 'linking' of the radio and headset. This is typically a much faster process then 'Pairing'.



Turn On
The AWR Advantage Plus
and Bluetooth headset.



Access the Short Menu By pressing the menu function key. The default is the S/M Key, long press.



Use the Up or Down Keys
To find the menu option
labeled Bluetooth. Press the
S/M key.



Use the Up or Down Keys
To select "LINK" then press
the S/M key.

The 'Connecting' process will typically take less than 10 seconds.



LINK - - - Will be displayed on the screen and the LED will flash blue while connecting.



Once Paired
The headset will say "device is connected" and the radio screen will display 'Blue OK'





(800) 475-5852 20809 Kensington Blvd., Lakeville, MN 55044 www.advancedwireless.com

