

Bluetooth™ Traditional Headset

Getting Started Guide



1. **Power On / Off:** When powered on, the headset will automatically enter the “pairing” mode.
 - to enter the “pairing” mode on the AWR Advantage two-way radio, press and hold the side button while turning on the radio. “LINK...” will be displayed on the radio (pairing may take up to 45 seconds).
 - when “paired”, the headset will speak “device connected” and the Advantage will show a “Bluetooth Ok” message.
 - to transmit, press the AWR Advantage’s Push-to-Talk (PTT) button. To listen, release the PTT button.
2. **Volume Control:** slide and hold “-” or “+” to change the headset’s volume level.
3. **LED:** While connected, the headset LED and AWR Advantage’s LED will occasionally flash blue.
4. **Charging Port (micro USB):** connect the charging cable to the micro USB charging port. The LED will light red while charging.
5. **Unused Buttons:** These buttons are not used. Do not press them while using with the AWR Advantage two-way radio.

follow us on:



(952) 469-5400
20809 Kensington Blvd., Lakeville, MN 55044
www.advancedwireless.com