

# Quick Start Guide

## AWR Advantage Changing Channel Frequency & Code

Find the Channel Frequency and Code on the radio you would like to match. Refer to the User Guide/Manual if needed.



### Press and Hold

The Push-to-Talk and F button while turning the unit on.



### Use the Up/Down Keys

To select the menu named CH. SETTING.



### Press the S/M Key

To select the Channel Setting Menu.



### Use the Up/Down Keys

To select the submenu named CH. FREQ.

*Start here if using "To Change Frequency and Code on Other Channels."*



### Press the S/M Key

To select. The number will begin to flash.



### Use the Up/Down Keys

To select the channel frequency that is desired.

follow us on:



(800) 475-5852  
20809 Kensington Blvd., Lakeville, MN 55044  
[www.advancedwireless.com](http://www.advancedwireless.com)

# Quick Start Guide

## AWR Advantage Changing Channel Frequency & Code



**Press the S/M Key**  
To Select. The number will stop flashing.



**Use the Up/Down Keys**  
To select the submenu named CODE.



**Press the S/M Key**  
To select. The number will begin to flash.



**Use the Up/Down Keys**  
To select the channel frequency that is desired.



**Press the S/M Key**  
To select. The number will stop flashing.



**Repeat**  
If needed on any other channel that needs the frequency or code changed.

## To Change Frequency and Code on Other Channels



**Go to the Submenu CH. NO**  
Press the S/M key. The number will begin to flash.



**Use the Up or Down Keys**  
To find the desired channel.



**Press the S/M Key**  
To select. The number will stop flashing. Start at the 4th step.