

Owner's Manual SC-EB



Troubleshooting

SC will not turn on:

- 1) Is the SC plugged in securely to the motor and the wall?
- 2) Is the electrical outlet being used a standard outlet?
- 3) Is the GFCI General Fault Circuit Interrupter set properly?
- 4) Has the compressor overheat? Is it cooled to room temp?
- 5) Has the SC been used for more than 15' again or about one hour?
- 6) Has the SC been used for more than 15' again or about one hour?
- 7) Has the SC been used for more than 15' again or about one hour?

Spray quality problems:

- 1) Is the liquid filter inspected, cleaned and free clean?
- 2) The sprayer and filter should be cleaned and rinsed with water each day after use.
- 3) Check that all hose "quick connectors" are connected.
- 4) Check hoses for kinks.
- 5) Is there foam in tank?
- 6) Clean the air filter weekly. Check "foam" on filter.
- 7) Clean the air filter weekly with the gun kit.
- 8) Clean the filter weekly to improve the spray pattern.
- 9) Is the nozzle clogged? Clean with paper clip.
- 10) Check nozzle spray with water.
- 11) Check to see if liquid filter is clogged. Clean out with paper clip.
- 12) Check to see if liquid filter is clogged. Clean out with paper clip.
- 13) Is the trigger mechanism dirty? Wash material and clean.
- 14) Is the trigger mechanism dirty? Wash material and clean.
- 15) Is the trigger mechanism dirty? Wash material and clean.
- 16) Is the trigger mechanism dirty? Wash material and clean.
- 17) Is the trigger mechanism dirty? Wash material and clean.
- 18) Is the trigger mechanism dirty? Wash material and clean.
- 19) Is the trigger mechanism dirty? Wash material and clean.
- 20) Is the trigger mechanism dirty? Wash material and clean.

Charging light will not come on:

- 1) Is the light on the handle of the spray gun, then use case as in manual?
- 2) Is the light on the handle of the spray gun, then use case as in manual?
- 3) Is the light on the handle of the spray gun, then use case as in manual?
- 4) Is the light on the handle of the spray gun, then use case as in manual?
- 5) Is the light on the handle of the spray gun, then use case as in manual?
- 6) Is the light on the handle of the spray gun, then use case as in manual?
- 7) Is the light on the handle of the spray gun, then use case as in manual?
- 8) Is the light on the handle of the spray gun, then use case as in manual?
- 9) Is the light on the handle of the spray gun, then use case as in manual?
- 10) Is the light on the handle of the spray gun, then use case as in manual?

Make sure it is available:

- 1) Is the "Troubleshooting" guide to the Owner's Manual?
- 2) Is the "Troubleshooting" guide to the Owner's Manual?
- 3) Is the "Troubleshooting" guide to the Owner's Manual?
- 4) Is the "Troubleshooting" guide to the Owner's Manual?
- 5) Is the "Troubleshooting" guide to the Owner's Manual?
- 6) Is the "Troubleshooting" guide to the Owner's Manual?
- 7) Is the "Troubleshooting" guide to the Owner's Manual?
- 8) Is the "Troubleshooting" guide to the Owner's Manual?
- 9) Is the "Troubleshooting" guide to the Owner's Manual?
- 10) Is the "Troubleshooting" guide to the Owner's Manual?



**Electrostatic
Spraying Systems**

62 Morrison St, Watkinsville, GA 30677-2749
 Phone: 706-769-0025 Fax: 706-769-8072
www.maxcharge.com



OWNER'S MANUAL

SC-EB

Electrostatic Spraying Systems, Inc.
62 Morrison St. · Watkinsville, GA 30677-2749

CE certification applied for

Copyright © 2009, Electrostatic Spraying Systems, Inc. – All Rights Reserved
This manual last updated September 2016



CONGRATULATIONS!

You have just purchased one of the most advanced spraying systems on the market today. Electrostatic Spraying Systems, Inc.¹ (ESS) is committed to providing you with powerful spraying systems that are easy to operate and maintain.

ESS products are the result of the efforts and creativity of many people. In addition to input from engineering, marketing and manufacturing personnel, suggestions from our customers have been implemented into the design of our equipment. We would like to hear your ideas also! If you have any suggestions or comments regarding ESS products and service write or call us at:

Electrostatic Spraying Systems, Inc.
62 Morrison St.
Watkinsville, Georgia 30677-2749
Phone: 706-769-0025
1-800-213-0518
Fax: (706) 769-8072
support@maxcharge.com



Please take time to read this manual before operating your new ESS SC-EB Suitcase Sprayer™. The manual contains important instructions for the safe operation of this equipment. It also includes helpful suggestions to maximize productive use of the SC-EB. Essential cleaning instructions should be followed to maintain your sprayer at peak efficiency. Please carefully read and follow all instructions for your own safety and the safety of others around you.

Thank you!

We appreciate your business and are proud that you have selected an ESS sprayer for your operation.

Your new sprayer has been thoroughly tested and calibrated at the factory. If you have any problems with it, please get in touch with us immediately. We will be glad to answer any questions you have concerning our equipment or service. ESS intends to support its customers with efficient, helpful and friendly service. We appreciate your business and sincerely hope that Electrostatic Spraying Systems can meet your present and future spraying equipment needs.



We encourage you to make copies of the "Spray Gun Yearly Service" form in the back of this manual. Use this form every year you send your gun in for maintenance and when we service the gun, your warranty will renew for another year. The service will replace the nozzle base, replace air and liquid hoses inside gun housing, replace filters, and recalibrate the gun and thoroughly cleaning the entire spray gun.

For your personal records

Please record the model and serial numbers of your new sprayer here.

SC-EB

Model #

Serial #

Spray gun serial number

Date of purchase.

¹ ESS SC-EB Sprayer™, SC-EB™, MaxCharge™, and the ESS logo are copyrights or registered trademarks of Electrostatic Spraying Systems, Inc.

Notes

TABLE OF CONTENTS

Overview of ESS SC-EB Air-Assisted Electrostatic Sprayer	1
Safe operation of the SC-EB sprayer	2
Operator’s responsibility.....	2
Caution: Shock hazard.....	2
Caution: Hot surface.....	3
Chemical safety precautions	3
About the low-voltage system of the MaxCharge Spray gun	3
Safety decals	4 – 5
Labeled diagram of SC-EB Sprayer.....	6
Quick List: Operating instructions.....	7
Steps for operation	7
Helpful hints.....	7
Quick List: Troubleshooting problems.....	8
Quick List: To clean the SC-EB after operation	9
Reference	
Spray gun	10
Trigger	11
Nozzle Assembly.....	12
Pre-Spray Check.....	13
Post-Spray Check.....	13
The air and liquid delivery systems.....	13
Quick Connects.....	14
Air Connection	15
Liquid Connection	15
Nalgene bottles.....	16
Batteries	16
To change the batteries.....	16
Yearly Spray gun service	17
Spraying with your ESS Sprayer.....	18
Spray technique.....	18
Siphoning	19
Preparing a tank mix	20
A note about operating temperatures	20
Trouble-Shooting Guide.....	21
Problem: Air pressure of spray appears low	21
Problem: No spray comes out of the nozzle or spray is erratic.....	21
Problem: Charging indicator blinks or goes out during operation.....	21
Problem: Air Compressor will not start.....	21
SC-EB Parts	22-30
CE Declaration	31
Warranty	32
Warranty card	32a
Spray Gun Repair/Yearly Service Return Form.....	34



Your SC-EB sprayer may appear slightly different than the photographs and drawings in this manual. We at ESS are constantly listening to customer input and we make frequent improvements to our sprayer designs.

Notes

Overview of the ESS Model SC-EB Air-Assisted Electrostatic Sprayer

Air-assisted electrostatic sprayers produce electrically charged spray droplets that are carried to the target in a low pressure, gentle, air stream. The heart of the SC-EB Sprayer is the patented MaxCharge™ nozzle.

Air and liquid enter separately at the rear of the nozzle. Just before leaving the nozzle, the air hits the liquid stream to make many thousands of tiny spray droplets that pass through the charging ring. An electrical charge is applied to the spray droplets by the charging ring. Then the charged spray droplets are blown out of the nozzle and move onto the target where they are attracted to surfaces by electrostatic forces. The electrostatic charge induced by the MaxCharge™ nozzle is strong enough to allow the droplets to move in any direction to cover surfaces, even defying gravity to coat the underside of leaves and the back side of the target objects. The result is uniform spray coverage on hidden surfaces that other sprayers miss. Air-assisted electrostatic sprayers give more than twice the deposition efficiency of hydraulic sprayers and non-electrostatic types of air-assisted sprayers. The grower benefits in terms of significant reductions in application costs and optimized insect and disease control, sanitization of beef or other coverage.



The MaxCharge™ nozzle is easy to clean and corrosion-proof. The interior ceramic outlet resists wear three times better than stainless steel outlets. These features combine to give the best spray coverage on the market. This quality product is virtually maintenance-free, and assures you of savings in the application of chemical.

The comparison of air-assisted electrostatic spraying versus conventional spraying is dramatic.



Electrostatically charged droplets are attracted to plant surfaces.

Where Does the Spray Go?

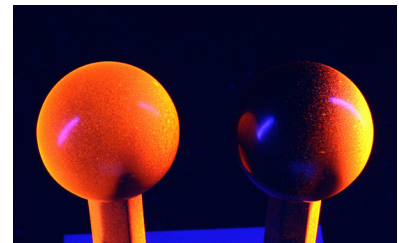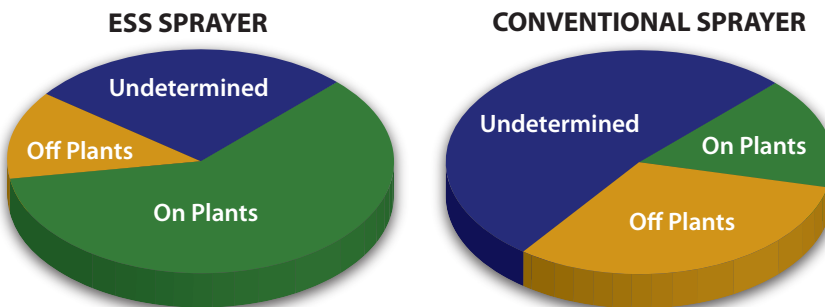

A picture worth a thousand words...
In this test, fluorescent dye has been sprayed on two round knobs. The left knob was sprayed with the electrostatic system ON; the right knob was sprayed with the same sprayer, but with the electrostatic system OFF. Note how even the coverage is on the electrostatic knob.

The University of California completed a series of tests to investigate what happens to spray liquid after it leaves the nozzle.

Conclusion: ESS technology places over 4 times the amount of spray onto the plant surface using 1/2 the amount of chemicals. Furthermore, they also reported that ESS sprayers send 2/3 less chemicals to the ground and into the air. There is less waste, less drift, and less chemical is used than with conventional sprayers.

Imagine the environmental benefit!

Safe operation of the SC-EB Sprayer

OPERATOR'S RESPONSIBILITY

Read the Owner's Manual.

It is the responsibility of the user to read the Owner's Manual, to understand the safe and correct operating procedures which pertain to the operation of the product, and to maintain the product according to the Owner's Manual. It is the owner's responsibility to ensure that all who are using this equipment read this manual.

The user is responsible for inspecting the equipment and for repairing and replacing damaged or worn parts to prevent damage or excessive wear to other parts. It is the user's responsibility to deliver the machine for service or replacement of defective parts which are covered by the standard warranty.

Lack of attention to safety can result in reduction of efficiency, accident, personal injury, or death. Watch for safety hazards and correct deficiencies promptly. Use the following safety precautions as a guide when using this machine.

- ◆ Read the Owner's Manual. Failure to read the manual is considered a misuse of the equipment.
- ◆ Use the SC-EB sprayer ONLY for its intended use as described in this manual.
- ◆ Do not allow a child to operate the SC-EB sprayer. Do not allow adults to operate the sprayer without proper instruction.
- ◆ Use extra care when spraying on stairs. Do not place sprayer on stairs.
- ◆ Do not use without tank in place.
- ◆ Always empty tank after use and before transporting the sprayer.
- ◆ Store sprayer in a dry place. Do not expose to freezing temperatures.

CAUTION: SHOCK HAZARD

The SC-EB sprayer has been engineered to be very safe during normal operation. However, as with all line-powered electrical equipment and tools, certain safety procedures need to be followed.

- ◆ Use a GFCI (Ground Fault Circuit Interrupter) power outlet whenever possible.
- ◆ If an extension cord is necessary, use a three-wire extension cord with a 3-prong grounding type plug.
- ◆ Turn off sprayer before unplugging.
- ◆ Unplug sprayer when not in use.
- ◆ Always unplug by grasping the plug. Do not unplug by pulling on the cord.
- ◆ Never pull plug with wet hands.
- ◆ Do not pull or carry the sprayer by its power cord. Do not crimp the cord or cause it to be damaged by straining it around sharp edges. Keep power cord away from heat sources.
- ◆ Do not use the SC-EB sprayer with a damaged power cord. Call ESS for a replacement.

CAUTION: HOT SURFACE

Be aware that the compressor inside the SC-EB becomes hot enough to burn you.

- ◆ The compressor becomes hot to the touch during normal use. Do not touch the SC-EB compressor after it has been running.
- ◆ Stay clear of the hot compressor when making adjustments inside the SC-EB case or switching bottles.
- ◆ The sprayer's compressor is equipped with a thermal overload switch. If it overheats, the compressor will stop running. Unplug the sprayer and let it stand for one hour with the door open. The unit should then be able to restart.


CHEMICAL SAFETY PRECAUTIONS

Read and follow all instructions on the chemical or pesticide manufacturer's label.

- ◆ Use protective clothing, eye protection and gloves when mixing chemicals to be sprayed with the SC-EB sprayer.
- ◆ Always use a respirator and eye protection when spraying with the SC-EB.
- ◆ Follow the chemical manufacturer's recommendations in handling, mixing, applying, storing and disposing of chemicals.
- ◆ Be aware of decontamination methods in case a person, clothing, or equipment is accidentally sprayed.
- ◆ Be aware of poisoning symptoms and know the appropriate first aid.
- ◆ Know the length of time needed to pass before allowing people and pets to go back into the sprayed area..

About the low-voltage system of the MaxCharge Spray gun

For operator safety, the power supply for the MaxCharge spray gun is entirely separate from the power supply for the sprayer's compressor. The spray gun is powered by 9-volt batteries in the handle of the SC-EB sprayer. This low-voltage charge is not enough to harm people. Some people report feeling a "tingle" or a slight stinging sensation when the spray from the spray gun falls on their bare skin.

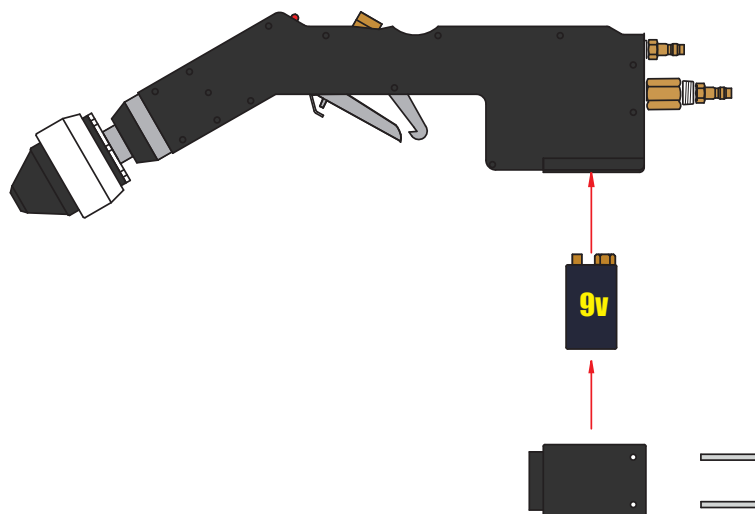

Safety decals

Appropriate safety decals are placed on ESS equipment in order to alert the operator to possible dangers. If any decal is missing or damaged, please contact ESS immediately for a replacement decal.



**PROTECT YOUR LUNGS
PROTECT YOUR EYES**

*READ AND FOLLOW THE CHEMICAL
MANUFACTURER'S INSTRUCTIONS CAREFULLY.*

*It is extremely important for the owner/
operator's safety as well as the safety of other
people in the vicinity that all chemical safety
precautions are followed.*

*This label is placed on top of the
SC-EB Sprayer, near the quick connect sockets.*



*The SC-EB compressor becomes hot
during normal operation.*

DO NOT TOUCH.



*This label is wrapped around the hose to
remind you to clean the filters regularly.
The number one cause of poor sprayer
performance is a clogged or dirty filter.*



*There will be a small shock when using
our sprayers. To avoid this shock place
your thumb on the bolt at the top of the
spraygun.*

ESS
Charger for
Electrostatic Spraying Systems

LED	MODE
●	Battery initialization & analysis
●	Fast charge
● ● ● ● ●	Top-off charge
●	Trickle charge
● ● ● ● ●	Error

With the mains connected, the LED will be orange the first 5-7 seconds, and be orange when the initialization and analysis starts. If a battery is connected, the actual charging will start a few seconds later when the LED changes to red/orange.

This label is placed on the charger of all sprayguns.



If you use a pacemaker, use our electrostatic sprayer at your own risk.

Troubleshooting Guide

When you encounter the problems listed below, use the suggested trouble-shooting methods.

Sprayer will not turn on:

- Is your sprayer plugged in? Make sure there are 13 amps available at the outlet.
- Is the electrical outlet faulty? Try a different outlet.
- Are you using an extension cord? Is extension cord the correct size?
- Is your sprayer power button "on"?
- Has the compressor overheated? Be careful, it may be hot. Let the sprayer cool with the door open and then try again in one hour.
- Did your fuse burn out? If so, replace it. A spare fuse is attached to the compressor frame.

Spray quality problems:




- Depress the trigger on the spraygun and while spraying water, place your finger over the nozzle blocking both the liquid and air. This will force air back through the spraygun and possibly clear any obstructions in the liquid line.
- Check that all hose "quick connections" are connected including hoses connected to the spraygun to the case/base and the liquid tank.
- Is the nozzle cover dirty? Unscrew the nozzle cover and wash inside nozzle cover with soap and water. With the nozzle cover removed, check to see if liquid port is clogged. Carefully clean out with paper clip or small wire.
- Is the liquid or ambient temperature too cold? The nozzle can freeze up when the ambient temperature is less than 50° F.
- Is the trigger mechanism dirty? Trigger may require replacing the trigger plunger mechanism. (see manual)

Charging light will not come on:

- If the red LED on the handle of the spraygun does not come on, it indicates that the spray is not receiving an electrostatic charge, or on rare occasions that the light is burned out.
- Make sure the spraygun batteries are charged. Fully charged batteries will last for about 5 continuous hours of use. If in doubt, take the cover off from the spraygun battery compartment, and temporarily replace the two rechargeable 9 volt batteries with regular 9 volt batteries.

This label is placed inside the SC-EB case for handy reference.

Labeled Diagrams of the SC-EB Sprayer

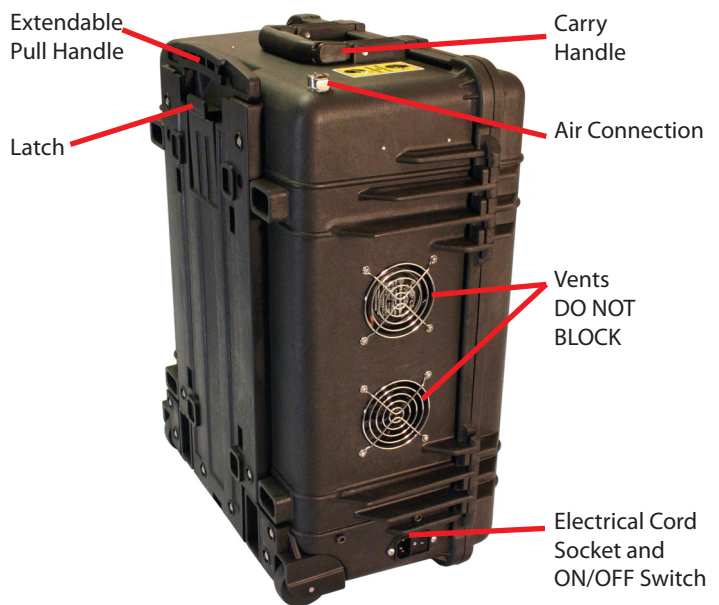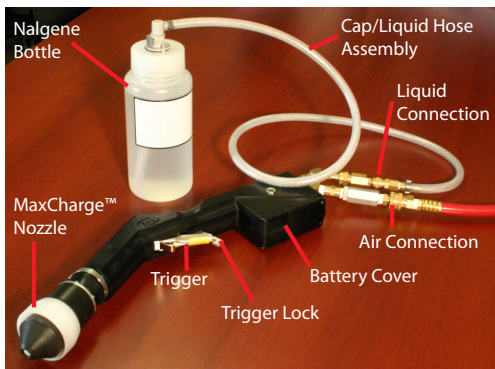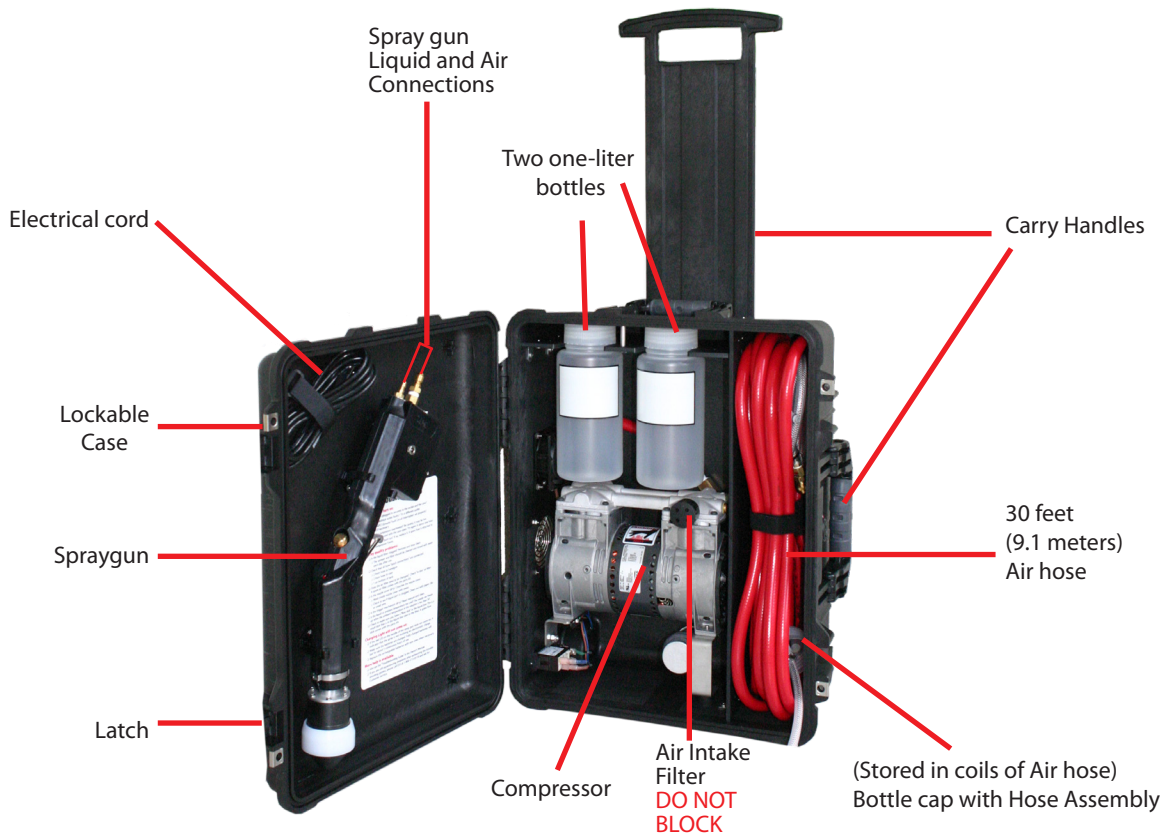

Quick List: Operating Instructions

Steps for Operation

1. Prepare the tank mix.
2. Fasten the Liquid Hose/Bottle Cap Assembly tightly on the Nalgene bottle.
3. Connect the red Air Hose to the sprayer air connection on the top of the SC-EB Sprayer.
3. Connect the Liquid Hose to the liquid leader on the spray gun. Connect the Air Hose to the Spray Gun Air Leader
4. Plug the power cord into an appropriate receptacle. Turn on the air compressor.
5. While either clipping the Nalgene bottle to your belt or holding the Nalgene bottle with one hand, spray with the other hand.

Helpful hints:

It's easy to quickly switch between two chemical mixtures. Make sure the SC-EB is turned off, then unscrew the hose assembly cap from one bottle and place it in the second bottle. Tighten securely. (Also make sure to cap the first bottle.) Turn the SC-EB on. You are ready to spray again. The unused bottle may be stored inside the SC-EB case.

The latch for the Pull Handle simply pulls out to release the Pull Handle. Extend the Pull Handle fully. To stow the handle, again release the latch, then push the Pull Handle in.

DO NOT BLOCK any of the vents or the Air Intake Filter. Doing so will cause the SC-EB compressor to overheat and trip the thermal overload switch.

NOTE: When the SC-EB has been in use for an extended period of time, the air hose will become hot. This is normal and the SC-EB will still function correctly without any damage occurring to the sprayer. However, the sprayer is a "light duty sprayer" and is not intended to be used continuously for hour after hour without allowing it to cool down periodically. Extended continuous usage may cause the hose to overheat, resulting in the hose failure.



Cautions:

ESS recommends that you use an outlet with a Ground-Fault Circuit Interrupter (GFCI).

Do not operate the SC-EB in standing water.

Do not immerse the SC-EB compressor.

The SC-EB compressor becomes hot enough to burn during normal operation.

DO NOT TOUCH.

The compressor has a built-in thermal overload switch. If the SC-EB overheats, the compressor will cut off. If this should happen, let the unit cool for one hour with the case open.



The one-liter bottles are easy to remove — just pull straight out.

Quick List: To clean the SC-EB after operation:

1. Clean the exterior of the sprayer with a damp cloth.
2. Clean the Nalgene bottles and Hose/Cap Assembly with clean water. Triple rinse.
3. Disconnect the red Air Hose from the Spray gun Air Line and Sprayer Air connection.
4. Disassemble and clean the liquid filter. Be careful not to lose the flow disk.
5. Unthread the quick connect plug from the spray gun liquid line leader. Use a $\frac{7}{16}$ " wrench on the plug and an $\frac{11}{16}$ " wrench on the $\frac{1}{8}$ " NPT body.
6. Connect the quick connect plug to the air hose of the twin line hose.
7. Fill one bottle with a liter of clean water.
8. Turn on the air compressor to flush the line with most of the of water. Turn off the air compressor.
9. Disconnect the quick connect plug from the air hose, then connect it into the spray gun liquid line leader.
10. Reassemble the liquid filter.
11. Turn on the air compressor and engage the trigger to flush the spray gun lines with the remaining water. Check the nozzle for a good spray pattern while flushing. Allow air to flow for 30 seconds after the water has been sprayed.
12. Apply silicone spray or similar lubricating oil to all quick connect fittings.

Detailed instructions on maintaining each of the SC-EB's components follow in the next sections.




This is an excellent silicone-based protective lubricant. You may purchase it directly from ESS. P/N 3174

REFERENCE

Spray gun

The spray gun is held by the operator during spraying. Activation of the trigger causes liquid to spray. The Spray gun has the following user-serviceable parts: the liquid filter assembly, the nozzle assembly, and the batteries. Except for the batteries, which are accessed by removing the battery cover, nothing inside the Spray gun shell is user-serviceable.

Do not open the spray gun shell; doing so will void the warranty on the spray gun.

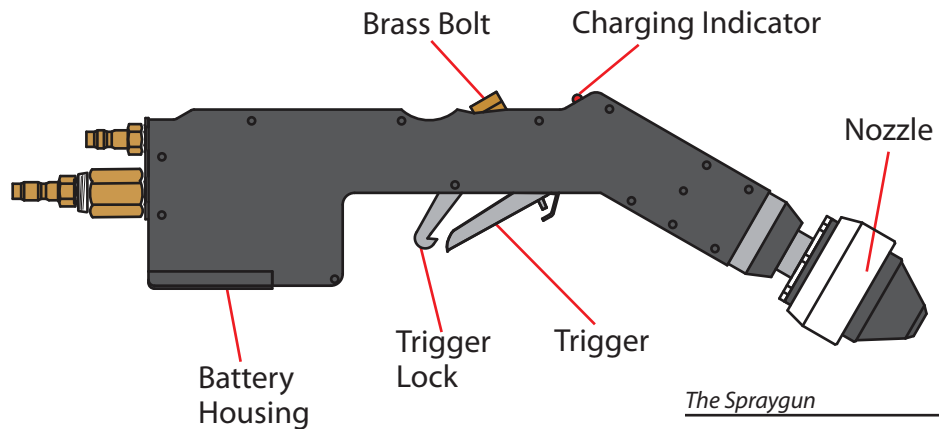


See these sections for further information:

- ***Changing the Batteries***
- ***Yearly Spraygun Service***
- ***Spraygun Technique***

Trigger

The trigger turns the spray on and off. It can be continuously held for operation or it can be locked in place.

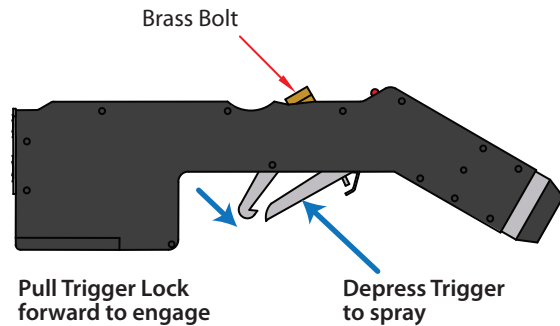

To engage/disengage the trigger:

1. Depress the trigger up towards the body of the spray gun to start spraying.
2. To keep spraying, either keep holding the trigger or lock it in place by pulling up the lock and hooking the trigger.
3. To stop spraying when the trigger is not locked, let go of the trigger.

To clean the trigger:

1. Unthread the brass bolt on the top of the spray gun with a $\frac{5}{8}$ " socket wrench. Be careful not to lose the spring, plunger, copper washer, and small brass bushing inside the trigger. Note how they fit inside so they may be replaced properly.
2. Check inside the trigger for blockage. Clean out any debris with compressed air or warm, soapy water.
3. Replace the spring and plunger; rethread the brass bolt into the top of the spray gun until tight.

Nozzle assembly

It is very important to follow all the maintenance and cleaning procedures to ensure that the electrostatic sprayer will function properly. Although the MaxCharge™ nozzle will outperform all electrostatic spray technology on the market, regular cleaning will ensure peak operating performance.

The nozzle assembly is located at the end of the spray gun wand. It is composed of a nozzle body, internal o-ring, Teflon ring, cover, external o-ring, and a hood (see labeled drawing at right). To access the nozzle components, just unscrew the nozzle cover by hand.

Cleaning the spray gun

Always rinse the spray gun out with clean soapy water after every day's spraying. That is the most important thing you can do to ensure trouble free operation of your SC-EB sprayer. By cleaning after each and every working day you will avoid the long-term chemical buildup that eventually causes clogs, poor spray patterns and shortens nozzle life.

Establish maintenance intervals to disassemble and clean the nozzle. Your nozzle maintenance schedule will vary depending on the types of chemicals used and adherence to pre- and post-spray checks. In general it is sufficient to thoroughly clean nozzles every 50 hours. If heavy loads of wettable powers are used, the cleaning schedule should be sooner.



To clean the nozzle assembly

1. Slide the hood over the nozzle cover.
2. Unscrew the cover from the nozzle base and remove the Teflon ring. Clean any debris from around the nozzle tip.

Note: There is a small o-ring in the nozzle around the base of the tip – take care that it doesn't fall off. If it does, clean it and press back into place. Also, take care not to damage the nozzle tip when the cover is removed.

3. Soak the ring, cover, and hood in a mild detergent solution. Use a small brush (soft or mild bristle) to clean the inside of the cover and the hole through it. Also, be sure to clean the hood. It is important to clean inside the hood and the two cavities. Rinse thoroughly.
4. Scrub the nozzle base with the detergent solution using a soft bristle brush. Clean the ceramic outlet. Be sure to thoroughly clean the base cavity and take care not to damage the nozzle tip. Rinse and make sure the small o-ring is in place.
5. Reassemble nozzle by placing the Teflon ring on the base and screwing the cover on **hand tight**. Next, slide the hood over the nozzle and seat it securely against the external o-ring. Wipe clean the exterior of all hoses and fittings connected to the nozzle.

The electrode cover should be hand tight. Never use pliers or other tools to tighten it. The insulating ring should be loose.

NOTE There will be a drip effect from the nozzle. The drip results from the accumulation of tiny electrostatically charged droplets wrapping back and coating the spraygun nozzle.

You may wish to purchase Nutra-Sol Tank Cleaner from ESS (S/N# 1566), which cuts hard water scale and chemical deposits from the electrode and internal component of the spray gun. The regular use of Nutra-Sol will keep your equipment operating at peak performance. The recommended mixing ratio is 4 ounces in 12.5 gallons of water (113 grams in 47 liters of water).

Pre-Spray Check

1. Inspect Spray Gun Nozzle

Check nozzle cover to make sure it is on hand tight (do not over tighten or use a wrench). Make sure the hood is seated firmly to the nozzle base and against the external o-ring.

2. Preparing the Tank Mix

If you will be spraying wettable powders it is a good idea to use a compatibility agent with the water and tank mix. Compatibility agents are chemicals mixed with the water that make mixing easier and keep heavy concentrations uniformly in suspension. Some brand name additives are COMPLIMENT™, UNITE®, and BALANCE™. Check with your local chemical supplier for others that are available.

Post-Spray Check

After each spray it is essential that hoses and spray gun be flushed with clean soapy water. This will help prevent chemical build-up that can clog lines and nozzles. Also, it is recommended that the nozzle exterior (black portion of nozzle) and nozzle hoods be cleaned with soapy water at this time.

The air & liquid delivery system

The air compressor

The air compressor produces compressed air which atomizes and propels the liquid. It plugs into a 110 volt electrical source. Use the SC-EB™ with an three-pronged extension cord of no more than 50 feet and rated for no less than 15 amp service. The On/Off switch is on the hinge side of the case.



ESS recommends the use of **NUTRA-SOL** cleaner which can be purchased from ESS. Order P/N 1566.



Cautions:

The SC-EB compressor becomes hot enough to burn during normal operation.

DO NOT TOUCH.

The compressor has a built-in thermal overload switch. If the SC-EB overheats, the compressor will cut off. If this should happen, let the unit cool for one hour with the case open.

Quick connects

There are four sets of quick connects (plug and socket) on the sprayer:

- Compressor (air) outlet
- Bottle Cap/Hose (liquid) outlet,
- Spraygun air inlet
- Spraygun liquid inlet

In all cases, the plug is on the outlet side of the connection.

Spraygun leaders

To connect or disconnect the quick connects at the spraygun leaders, slide the sleeve on the quick connect socket up. To disconnect, simply pull the socket out of the quick connect plug while holding the sleeve up.


To connect, slide the sleeve of the quick connect socket up. While holding the sleeve up, push the socket onto the quick connect plug. Then release the sleeve. Pull on the hose to ensure that it is properly seated and cannot be pulled off the plug when the sleeve is down.

One-liter bottle cap connector

To disconnect, push the gray latch at the side of the socket to release the plug. Pull the plug out of the socket. Similarly, to connect, push the latch at the side of the socket while pushing the plug in until you feel it latch. Test the connection by tugging gently on the clear hose.

Top of the SC-EB:

To disconnect, push in the metal tab at the side of the socket. Pull out the plug. Connection: Push the air hose plug into its socket until you feel it latch. Pull gently to make sure it is properly seated.

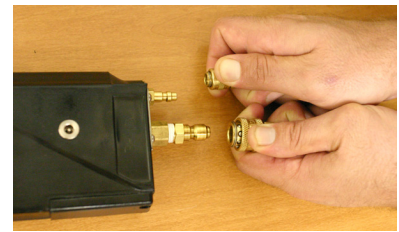

To connect or disconnect the air or liquid connections on the spraygun, pull back the outer sleeve of the socket to release.




To connect or disconnect the liquid connection on the bottle cap, push in the small latch to release the connector.



To connect or disconnect the air connection at the top of the sprayer, push the small latch to release the connector.

Air connection

The quick connect for the air connection is on the top of the SC-EB case and is toward the outside of the case. The other end of the red Air hose connects to the air leader of the spray gun. The air leader of the spray gun is below the liquid leader and is easily recognizable because its connector is larger than the liquid connector – it is not possible to connect the air hose to the liquid leader.

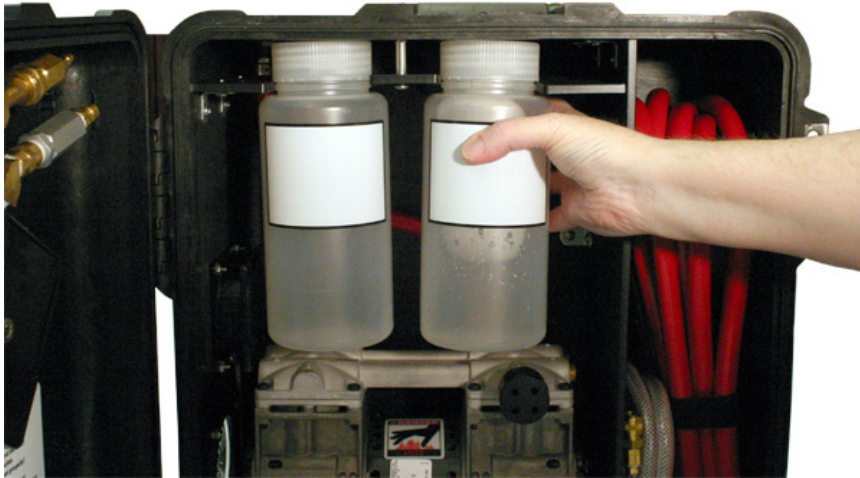

The Nalgene bottles store securely inside the SC-EB's case.

Always check the Nalgene bottle's cap before spraying.

Without a proper seal, liquid could come leak out of the bottle.

Liquid connection

The quick connect for the Bottle Cap/Hose connection (liquid line) Connects directly to the Liquid leader of the Spray gun.




ESS recommends the use of NUTRA-SOL cleaner which can be purchased from ESS. Order P/N 1566.

Nalgene Bottles

The Nalgene bottles should be thoroughly cleaned immediately after each use by triple-rinsing the tank; a commercially available tank cleaner like Nutra-Sol may be used and is recommended when the SC-EB™ is used to spray wettable powders on a regular basis.

Batteries

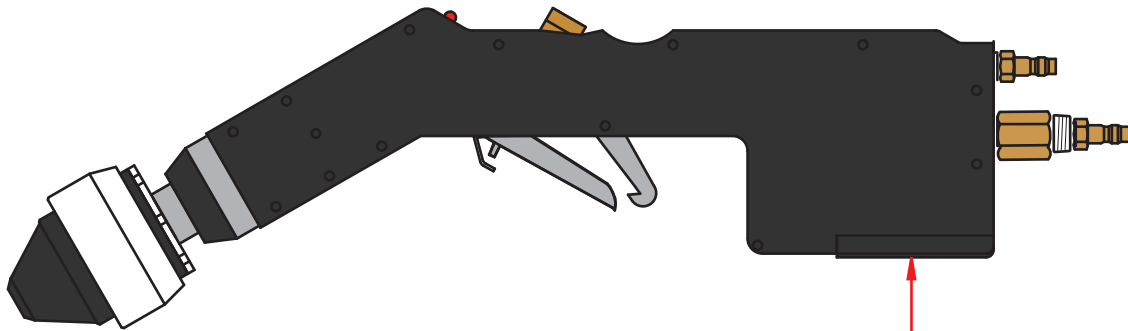

The nozzle charging operates on two 9-volt rechargeable batteries which are located in the base of the spray gun. In average conditions, the batteries will last 10 to 15 hours of operation on a charge.

They should be recharged when the charging indicator on top of the spray gun shell doesn't glow when air is going through the spray gun.

After approximately 800 to 1000 hours of service the battery pack will no longer be able to hold an adequate charge and will need to be replaced. Replace with Nickel-Hydride rechargeable batteries. Order the SC-EB Replacement Battery Pack from ESS, S/N # 4512.

To change the batteries:

1. Unscrew the two 6-32 x ½" Phillips head machine screws which hold the battery cover in place.
2. While holding the leads in one hand, gently disconnect the batteries from the leads. Be careful not to tear the leads off the wires or tear the lead wires out of the power supply.
3. Connect the fresh battery pack to the leads.
4. Replace the battery cover. Screw the two 6-32 x ½" Phillips head machine screws back in to secure the battery cover.
5. Charge the spray gun before attempting to use it.

Remember to charge the spray gun batteries after every work session!

Yearly Spraygun Services

Electrostatic Spraying Systems, Inc. offers and recommends yearly services on ESS spray guns. For a nominal fee plus the cost of replacement parts, ESS will thoroughly clean the spray gun, replace any worn parts and recalibrate the electronics and nozzle. The Yearly Service also extends the spray gun warranty for another year. Consistent yearly service by ESS will increase spraying performance and prolong the life of the gun.

Contact ESS at (706) 769-0025 to schedule spray gun services. Then package the spray gun securely since it can be damaged in shipment. Ship the spray gun in its original packing material if possible. If the original packing is not available, wrap the spray gun in bubble wrap, place it in a strong cardboard box and surround the gun handle with foam packing. Include a return shipping address and a telephone number.

A form is provided for you at the back of this manual

Ship the spray gun via UPS or Parcel Post to:

**Electrostatic Spraying Systems, Inc.
62 Morrison Street
Watkinsville, GA 30677**

Yearly service will be conducted within one day of receipt by ESS. If any parts need to be replaced, the owner will be contacted for authorization before replacement. The spray gun will be returned via UPS, COD, or return shipping costs may be invoiced, contingent upon credit approval. ESS also accepts the following charge cards: Visa and MasterCard.

As an additional benefit, Yearly Spraygun Service "turns back the clock" – the original 1-Year Warranty on the spraygun is renewed for another year!

Yet another good reason to send your spraygun in to ESS for factory-authorized service!

Make sure to save the box your spray gun comes in! You'll need it to return the spray gun for service.

Spraying with your ESS sprayer

Note: When using unfamiliar equipment or chemicals, always test on a small area before treating the entire crop or surface. Do not use a chemical with the ESS sprayer if the label prohibits use in low-volume sprayers. This unit is for light-duty use. Only spray in sessions of 20-30 minutes, with a 5-10 break in between.


Spray Technique

As in spray painting, the goal is to achieve even coverage over the surface. The ESS MaxCharge spray gun is designed to help you do just that -- by propelling the chemical spray with a gentle air flow, you can stay well away from the target surface and let the electrostatic attraction do the rest of the work.

Please note: the spray droplets are very, very fine --- about 40 microns each. If you are used to working with a conventional sprayer, you may make the mistake of thinking the target is not wet enough because you do not see large beads of liquid. In fact, after a pass with the SC-EB's MaxCharge spray gun, the surface of the target should just barely glisten with moisture. The fine droplets will evaporate quickly.

Here are some tips to achieve the best possible coverage with the ESS SC-EB sprayer.

1. Before each job, ensure that your sprayer is in good working order (see the pre-spray checklist on page 15 of this manual).
2. The optimal spraying distance is at least 18 inches away from the target surface, however 36 to 48 inches may provide a more even coating. This gives the fine mist produced by the MaxCharge nozzle room to develop into a chaotic cloud that will be attracted to the target surface.
3. Hold the spray gun at right angles to the target surface. Starting at the highest point and using zig-zag horizontal strokes about 1 meter (3 ft.) wide, spray down to the lowest point. Try to have each stroke overlap the previous stroke by about 50%.
4. You can use vertical strokes if it suits the area better. Just make sure to work in a methodical pattern and let your strokes overlap.
5. When moving to the next section, allow it to overlap the previous section by a few inches. Do not leave a gap.
6. The target surface should just barely glisten with the spray. Do not over-saturate the surface; if you see runs or puddles it means you are wasting chemicals. Do check to make sure the newly-sprayed surface is very slightly damp.
7. Be careful to keep the spray gun barrel as level as possible. If you allow the nozzle to point down too much, it may drip occasionally.
8. Unlike spray painting, you don't have to stop the spray on every return stroke. Just engage the trigger lock and concentrate on the regular pattern of spraying.
9. Periodically check to make sure the red light is illuminated on the spray gun.

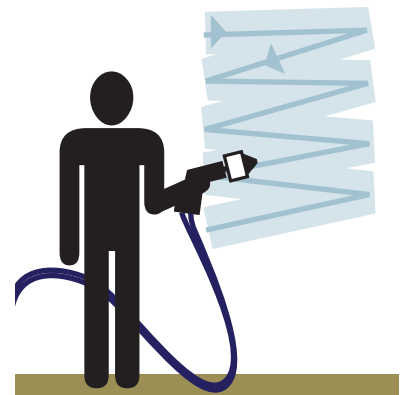

Siphoning

The SC-EB has removable bottles, but when they are not removed and remain in the case, the sprayer relies on siphoning the liquid from the bottles. If your spray gun is held above your head, the liquid will not spray properly. To achieve optimum performance from your sprayer, hold the spray gun no higher than your shoulder. You may experience sputtering or inconsistent spraying if you are holding the spraygun to



Correct spray technique with similar sprayer, SC-ET-HD

Preparing a Tank Mix

The tank mix depends on two factors: water requirement and dosage. Water requirement is the amount of water needed to cover the given treatment area. Dosage is the amount of chemical which should be applied in a given treatment area.

First determine the water requirement for your sprayer over a known area. An easy way to determine water requirement is to spray a trial application with water. Put a gallon of clean water in the ESS SC-EB tank and thoroughly spray a known area. After spraying the known area, determine how much water was used from the amount left in the tank. This is the water requirement for the given area. Next measure the known area to determine how many square feet were sprayed. Write down both values for future reference.

_____ (gallons) Water Requirement
for _____ (size of known area in ft²)

Next determine the dosage. This is the amount of chemical you wish to dispense in a given area. Appropriate dosage depends upon chemical label recommendations, disinfection or sanitization goals, level of pest or disease infestation, past experience with particular chemicals, and other variables.

Because electrostatic spraying is a much more effective spraying method, ESS recommends that you experiment to find the optimum chemical concentration. Start spraying using the same chemical rate used in the past with other sprayers. Test to ensure that infective agent levels have been reduced to desired levels. At the next application, start reducing the amount of chemical used for each spray. Keeping the amount of water in the tank constant, cut the amount of chemical mixed in by 15 to 25% for each spray, testing after each experiment to see if the desired results are being accomplished. If you are planning to cut rates then it is very important to conduct these experiments to determine the optimum chemical concentration.

A note about operating temperatures

The MaxCharge nozzle should always be operated at temperatures above 10° Celsius (50° Fahrenheit). When the ambient temperature is colder than this, the evaporative cooling caused as the spray is atomized will freeze the nozzle opening.

Nozzle freeze-up can also occur when the liquid to be sprayed is colder than 10° C (50° F).

HOW TO CONDUCT A JAR TEST

Needed:

Solutions of chemicals in approximate dilutions

Jar with lid

Gloves

Safety Glasses

After mixing solutions of the desired chemicals, place them in a large jar, cap it securely, and shake vigorously.

Carefully observe the interaction between the chemical compounds. If the water becomes milky or cloudy, the combined solution may plug the nozzles. Let the jar sit for one to two hours. If there is precipitate on the bottom of the jar, then seek another combination of chemicals.

IMPORTANT
Water temperature must be at least 10° C (50° F). When the liquid and air meet in the nozzle, the temperature of the liquid decreases. As a result, water at temperatures below 10° C (50° F) may freeze and clog the nozzle.

Troubleshooting Guide

When you encounter the problems listed below, use the suggested trouble-shooting methods.

Sprayer will not turn on:

- Is your sprayer plugged in? Make sure there are 13 amps available at the outlet.
- Is the electrical outlet faulty? Try a different outlet.
- Are you using an extension cord? Is extension cord the correct size?
- Is your sprayer power button “on”?
- Has the compressor overheated? Be careful, it may be hot. Let the sprayer cool with the door open and then try again in one hour.
- Did your fuse burn out? If so, replace it. A spare fuse is attached to the compressor frame.


Spray quality problems:

- Depress the trigger on the spraygun and while spraying water, place your finger over the nozzle blocking both the liquid and air. This will force air back through the spraygun and possibly clear any obstructions in the liquid line.
- Check that all hose “quick connections” are connected including hoses connected to the spraygun to the case/base and the liquid tank.
- Is the nozzle cover dirty? Unscrew the nozzle cover and wash inside nozzle cover with soap and water. With the nozzle cover removed, check to see if liquid port is clogged. Carefully clean out with paper clip or small wire.
- Is the liquid or ambient temperature too cold? The nozzle can freeze up when the ambient temperature is less than 50° F.
- Is the trigger mechanism dirty? Trigger may require replacing the trigger plunger mechanism. (see manual)

Charging light will not come on:

- If the red LED on the handle of the spraygun does not come on, it indicates that the spray is not receiving an electrostatic charge, or on rare occasions that the light is burned out.
- Make sure the spraygun batteries are charged. Fully charged batteries will last for about 5 continuous hours of use. If in doubt, take the cover off from the spraygun battery compartment, and temporarily replace the two rechargeable 9 volt batteries with regular 9 volt batteries.

Notes

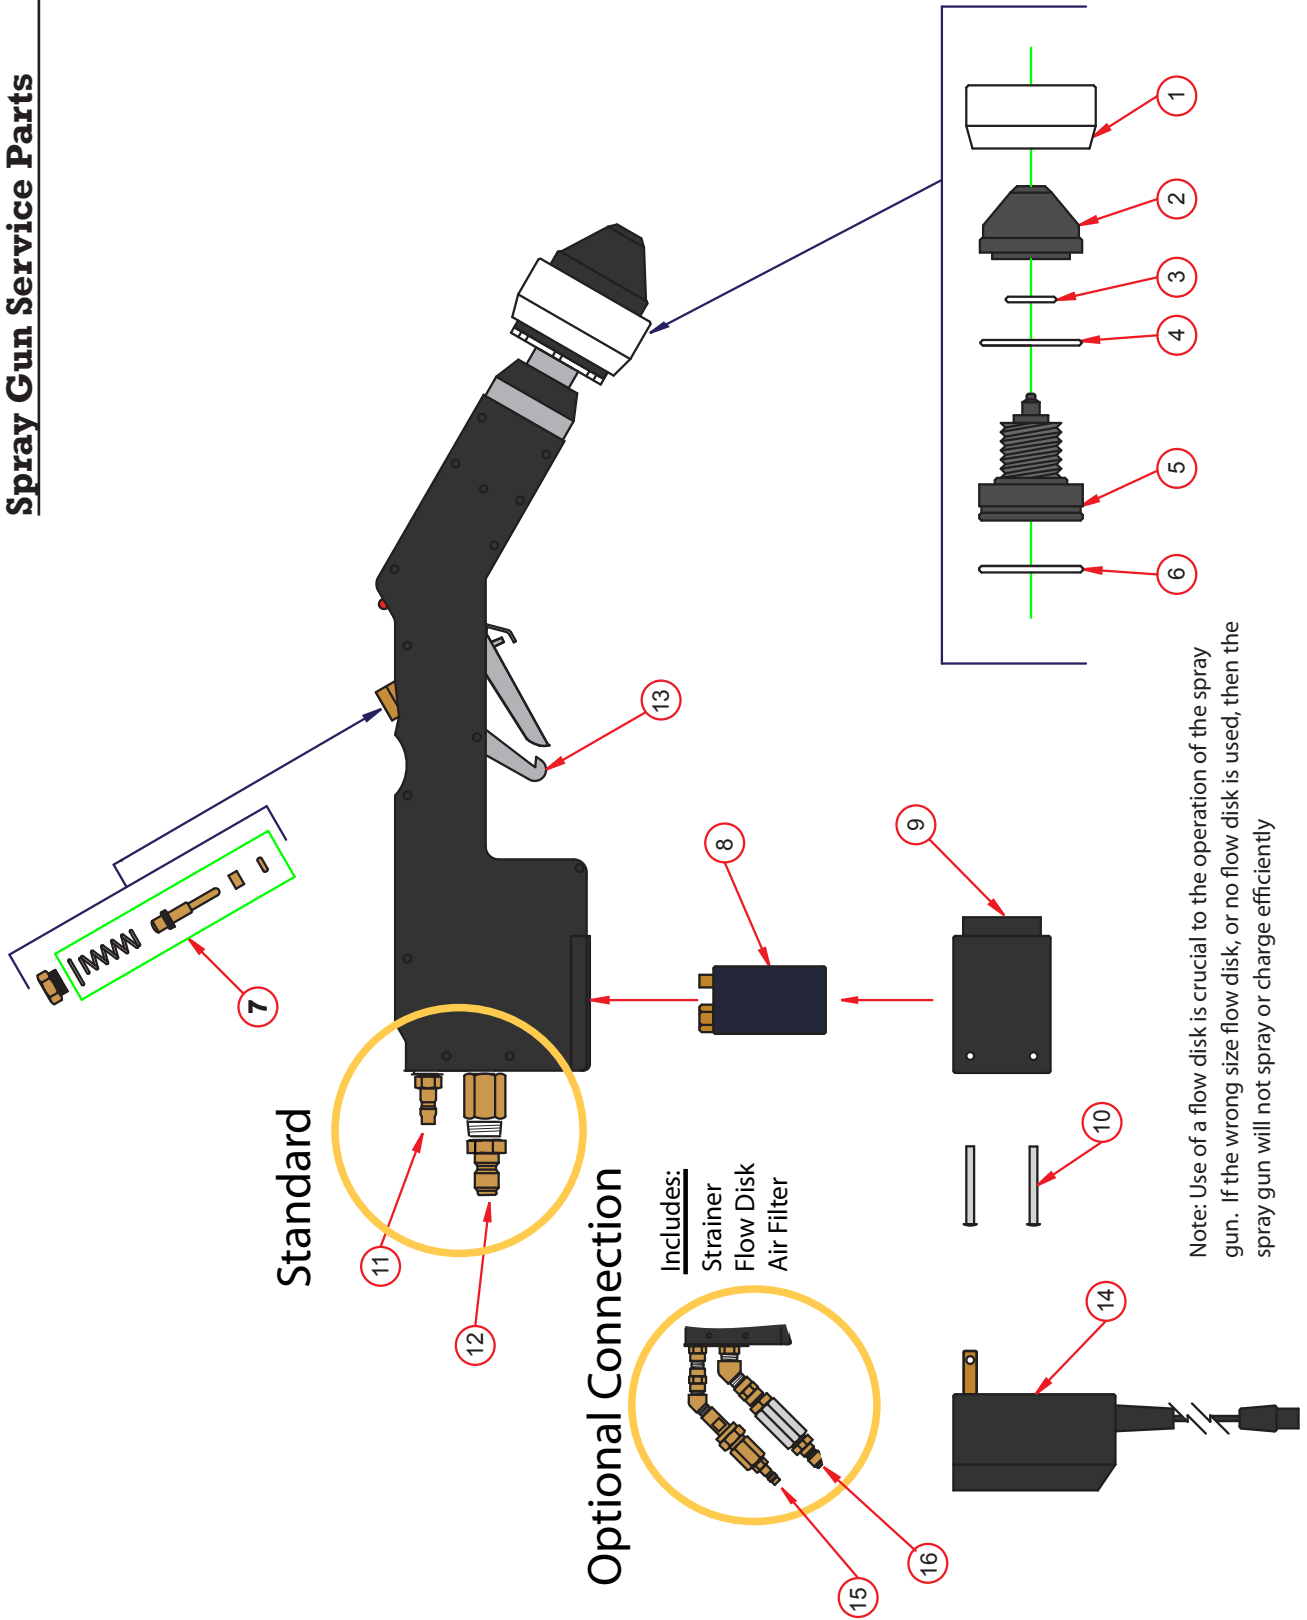

SC-EB Spray Gun Service Parts

ITEM NUMBER	ESS PART NUMBER	DESCRIPTION	QUANTITY ORDERED
1	5795	Hood	1
2	5775	Nozzle Cover	1
3	5771	O-ring, Internal	1
4	5694	Teflon Ring	1
5	5777	Nozzle Body <i>Note: Must Send Spray Gun In For Repair</i>	1
6	5770	O-ring, External	1
7	3731	Repair Kit, Trigger	1
8	4512	Battery, Alkaline,9V	1
9	118	Battery Cover, Spray gun shell	1
10	316	Screw, #6-32 x 3/8 Long, Phillips, SS	1
11	239	QC Plug, 1/18 , 1/8 MPT Brass (liquid connection)	1
12	240	QC Plug 1/4, 1/4 MPT, Brass	1
13	6518	Trigger Pawl	1
14	4430	Battery Charger	1
15	1748	Leader Assembly, Liquid	1
16	3238	Leader Assembly,, Air	1


Base Unit (Standard 110V)



P/N 1087: Tee - 1/4" NPT - Male Branch - BR



P/N 1229: Nalgene Bottle - 1000ML

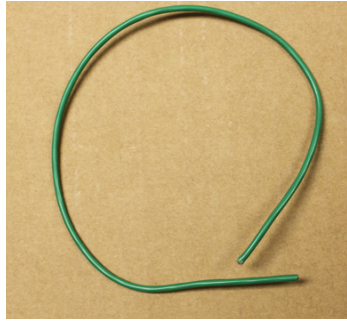

P/N 1489: Wire - 16 ga - Green - PVC Hook-Up



P/N 1662: Hose Clamp - Worm - Size 4 - SS



P/N 16984: Tool Holder




P/N 16998: Vibration Dampering Sandwich - Rubber




P/N 17007: Coupling Panel Mount Socket - ???



P/N 17105: Extension Cord

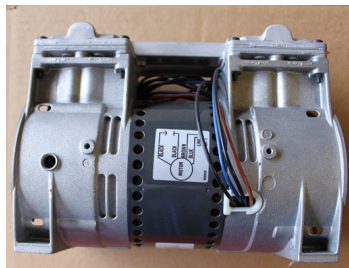

P/N 17120: Compressor

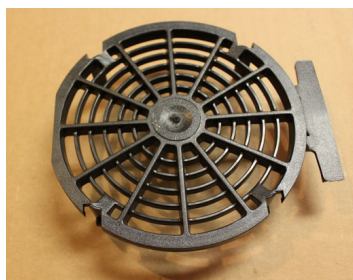

P/N 17140: Fan Guards for Compressor



P/N 17144: Cooling Fan



P/N 17145: Steel Fan Guard



P/N 17154: Clamp




P/N 17218: Case



P/N 17228: DF11 IEC Appliance Connector for SC



P/N 17231: Angle Bracket

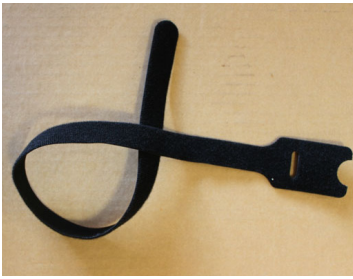


P/N 17238: One Wrap - Strap



P/N 17239: Clinching Strap



P/N 17279: Bottle Belt Holder

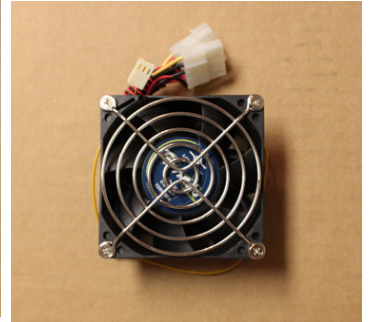

P/N 17282: Aluminum Carabiner



P/N 181: Wire/ Cable Tie - Nylon



P/N 370: Chain



P/N 410 Wire Tie, Nylon



P/N 411: Hose Barb 3/8" HB X 1/4" MPT - BR




P/N 4945: Pop-Off Valve



P/N 6564: Connector Ring -Male



P/N 9003: Heat Shrink Connector Blue

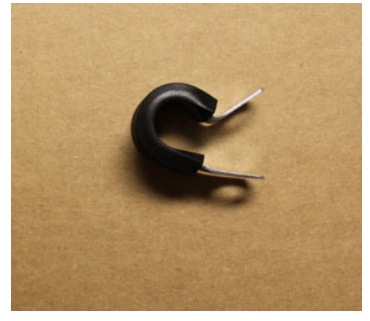


P/N 9149: Loop Strap



P/N 915: Hose Clamp, Two Ear 5/8"




P/N 959: Connector Tab - Female

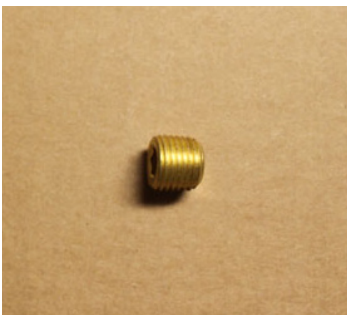

P/N 9856: Plug - Socket Head 1/4"



P/N AP17235: Bottle Holder Support Pin

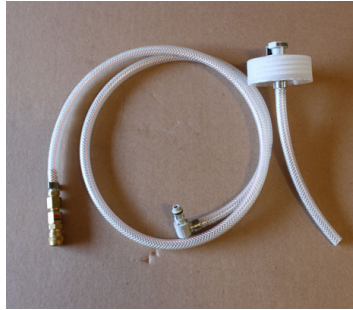


P/N AS17283: Lid and Short Hose
P/N AS17283-2: Long hose to gun

220V



P/N 15504: Loop Strap

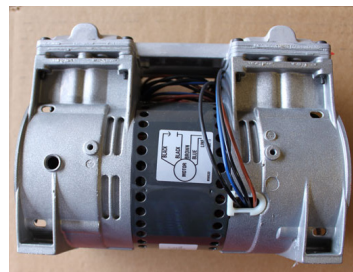

P/N 17139: 220V Compressor



P/N 17191: Extension Cord 220V



P/N 17192: Cooling Fan 23 CFM 220V

Hose



P/N AS17137-3: Hose Assembly - 30 feet (Air)



P/N 107: Ferrule - 3/8" - BR




P/N 17151: Hose Bend Restrictor




P/N 17327: 5/6" Hose Barb to 1/4" QC



P/N 216: Hose - 3/8" ID - Conductive - Red

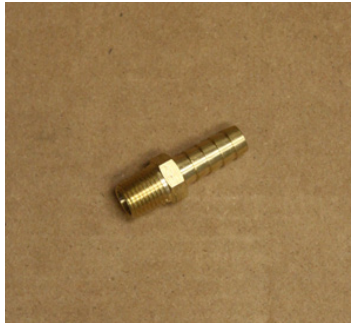

P/N 411: Hose Barb 3/8" HB X 1/4" MPT - BR

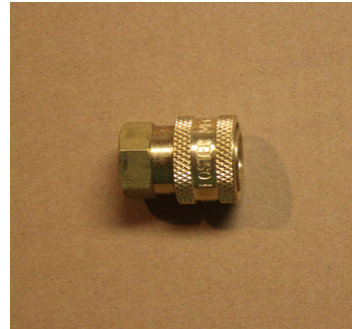

P/N 92: QC Socket to Spraygun - Air



P/N AS1526-1: Nalgene Bottle with Liquid Hose



P/N 1229: Nalgene Bottle



P/N 110: Hose Barb - 1/4" HB x 1/8" MPT - BR



P/N 181: Wire / Cable Tie - Nylon - Black




P/N 224: Ferrule - 1/4" BR



P/N 396: Hose - 1/4" ID - Grey

Spraygun

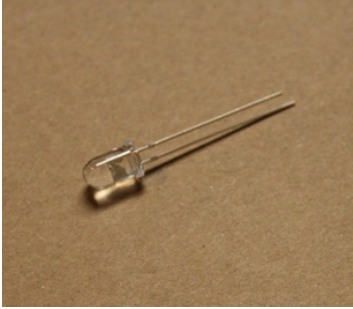

P/N 129: LED - Light - Red



P/N 130: Batter 9v



P/N 137: Air Switch




P/N 17152: Battery - Rechargeable 9v




P/N 1778: Plunger Valve Assembly for Trigger




P/N 1779: Plunger Valve O-ring for Trigger

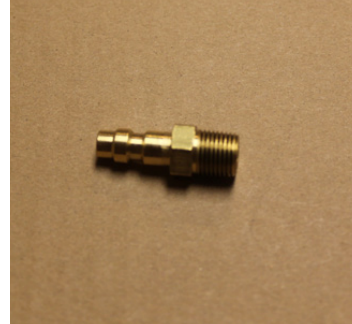

P/N 239: Quick Connect Spraygun Liquid

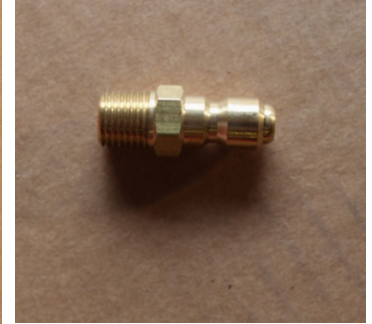

P/N 240: Quick Connect Spraygun Air

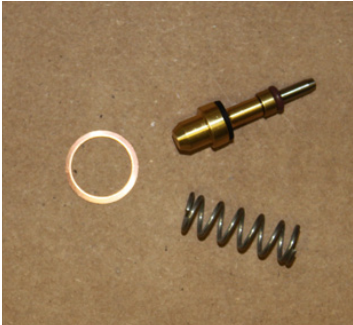

P/N 3731: Trigger Repair Kit



P/N 41: 3/8" BH x 1/8" MPT Brass



P/N 437: Liquid Filter - Mesh




P/N 767: Cap - Flow Regulator




P/N 768: Adaptor - Flow Regulator



P/N 770: Body - Flow Regulator

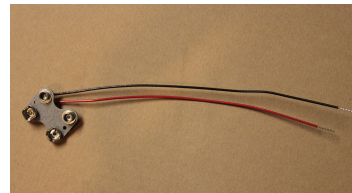


P/N 835: Battery Terminal

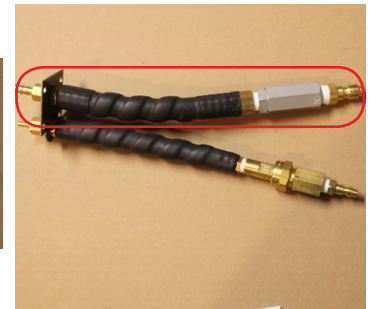


P/N AS1953: Air Line Leader Assembly




P/N AS1957: Trigger Assembly

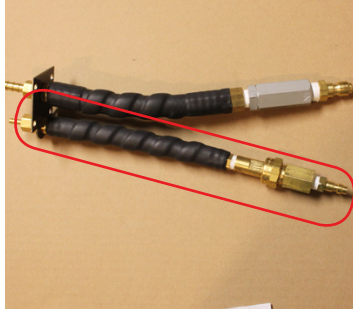

P/N AS3238: Liquid Line Leader Assembly

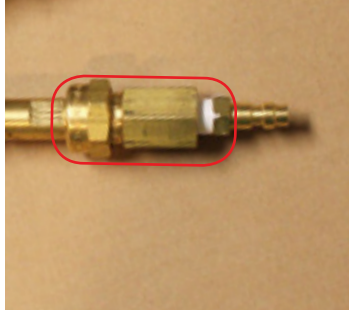


P/N AS3239: Flow Regulator

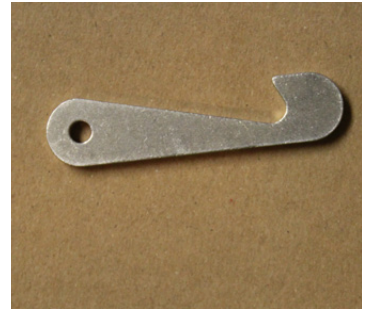

P/N PP6518: Trigger Pawl




P/N AP4227: Spraygun Shell Left

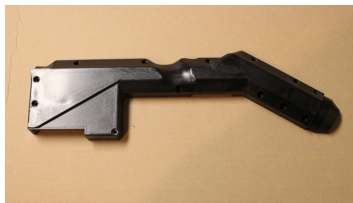

P/N AP4228: Spraygun Shell Right



P/N AP4229: Battery Cover

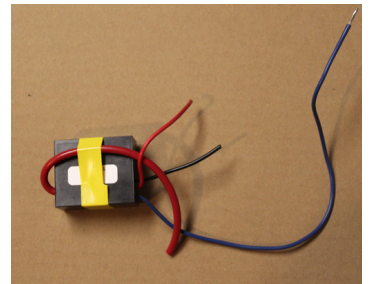

P/N PS-9141: Power Supply

Misc Parts




P/N AK9152: Parts Kit




P/N AS4430: Charger




P/N 17520: Plug Adaptor - US

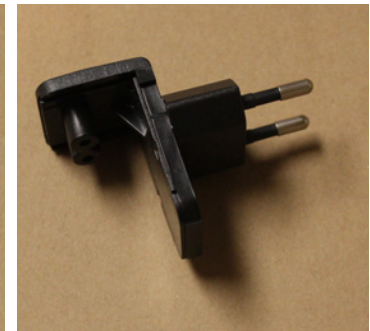

P/N 17521: Plug Adaptor - Euro

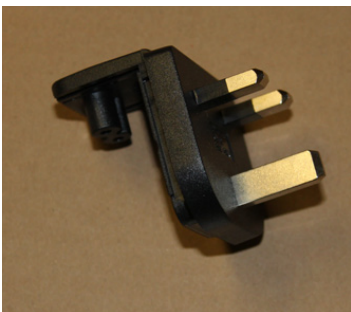

P/N 17522: Plug Adaptor - UK

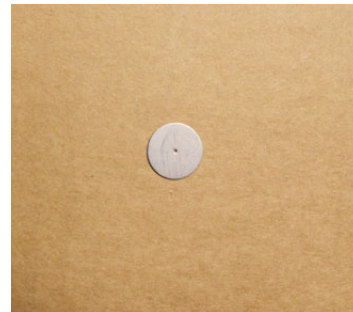

P/N 1755: Flow Disk, #30



P/N 227: Filter, In Line



P/N 231: Air Filer



DECLARATION OF CONFORMITY
(According to ISO/IEC Guide 22 And EN 45014)



Unique Product No.: XT, SC-1, SC-ET, SC-EB, EPS-5

Manufacturer: Electrostatic Spraying Systems, Inc.
Company name: Electrostatic Spraying Systems, Inc.
Street: 62 Morrison St.
City: Watkinsville
Postal Code: 30677
State/County: Georgia
Country: United States
Telephone: 1(706) 769-0025
Email bruce@maxcharge.com

Tester: Peter Gans
Date of Test: January 5, 2011
Authorized Representative: BSL Technologies Inc.

This declaration of conformity is issued under the sole responsibility of the manufacturer.


Object(s) of the declaration:
Electrostatic Sprayer Model numbers
XT-3/110 XT-3/220
SC-1/110 SC-1/220
SC-ET/110 SC-ET/220
SC-EB/110 SC-EB/220
EPS-5/220

The object of the declaration described above is in conformity with the relevant Community harmonization legislation:
Directive 2004/108/EC EMC
Directive 2006/95/EC Low Voltage

References to the relevant harmonised standards used or references to the specifications in relation to which conformity is declared:
EN 1953:1998 + A1:2009 EN 60204-1:2006 +A1:2009
EN 62479:2010 EN 61140:2002 + A1:2006
EN 61293:1994

Signed for and on behalf of Electrostatic Spraying Systems, Inc.
Watkinsville, GA, USA on July 26, 2011.

Bruce Whiting, President

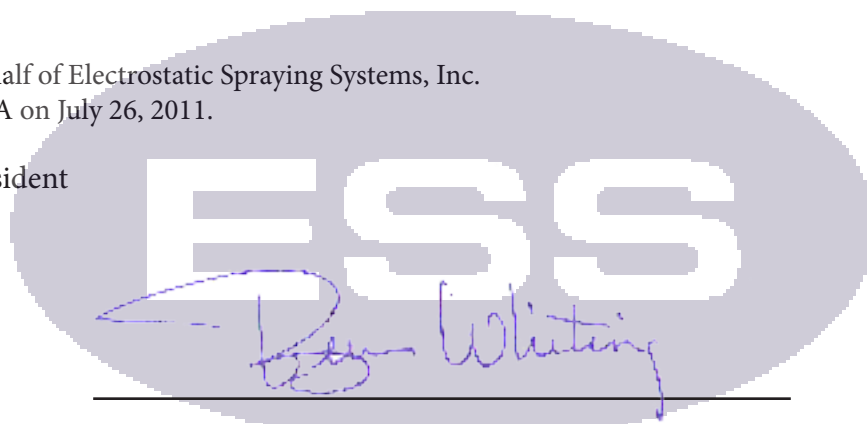



62 Morrison St. · Watkinsonville, Georgia 30677-2749
706-769-0025 · 1-800-213-0518 · Fax: 706-760-8072
Email: support@maxcharge.com · www.maxcharge.com

ESS Warranty

Electrostatic Spraying Systems, Inc. warrants to the original purchaser of any Electrostatic Spraying Systems equipment that the equipment shall be free from defects in material and workmanship for a period of one year after date of delivery. The electrostatic power supply warranty form must be returned for verification of date of purchase.

Disclaimer of Implied Warranties and Consequential Damages

Electrostatic Spraying Systems' obligation under this warranty, to the extent allowed by law, is in lieu of all warranties, implied or expressed, including implied warranties of merchantability and fitness for a particular purpose and any liability for incidental and consequential damages with respect to the sale or use of the items warranted. Such incidental and consequential damages shall include, but not be limited to: transportation, charges other than normal freight charges, cost of installation other than cost approved by Electrostatic Spraying Systems, Inc., duty, taxes, charges for normal service or adjustments, loss of crops or any other loss of income, expenses due to loss, damage, detention or delay in the delivery of equipment or parts resulting from acts beyond the control of Electrostatic Spraying Systems, Inc.

THIS WARRANTY SHALL NOT APPLY:

1. To vendor items which carry their own warranties such as, but not limited to, engines, air compressors, and liquid pumps. Electrostatic Spraying Systems, Inc. shall supply replacement parts at list price pending the warranty investigation of the vendor item. Vendor item parts such as air compressors, liquid pumps, solenoids, and other such items must be returned before warranty credit.
2. If the unit has been subject to misapplication, abuse, misuse, negligence, fire or other accident.
3. If parts not made or supplied by Electrostatic Spraying Systems, Inc. have been used in connection of the unit, if, in the sole judgment of Electrostatic Spraying Systems, Inc. such parts affect its performance, stability or reliability.
4. If the unit has been altered or repaired in a manner which, in the sole judgment of Electrostatic Spraying Systems, Inc. such alteration or repair affects its performance, stability or reliability. This shall include but not be limited to opening of the spray gun shell by anyone not authorized by Electrostatic Spraying Systems, Inc. to do so.
5. **To normal maintenance, service and replacement items such as, but not limited to, engine lubricant, filters, or to normal deterioration of such things as, but not limited to, belts and exterior finish, due to use and exposure.**

NO EMPLOYEE OR REPRESENTATIVE OF
ELECTROSTATIC SPRAYING SYSTEMS, INC.
IS AUTHORIZED TO CHANGE THIS WARRANTY IN ANY WAY
OR GRANT ANY OTHER WARRANTY
UNLESS SUCH CHANGE IS MADE IN WRITING
AND IS SIGNED BY A CORPORATE OFFICER OF
ELECTROSTATIC SPRAYING SYSTEMS, INC.

Notes

Spraygun Return Form

When returning a spraygun for warranty or repair services to ESS, please pack it securely and include the following form with your spraygun. We require you to fill out all information completely. With many changes to companies our records may not have the correct contact information. We at ESS want to expedite the process quickly but communication is the key to a quick repair.

Spraygun Serial Number: _____

Returned from: _____

Company: _____

Contact person: _____

Phone number: _____

Email address: _____

Shipping address: _____

Mailing address: _____

(if different) _____

Date last serviced: _____

Problems with the Spraygun or is this just a yearly service? _____

Method of Payment:

Account (must be an approved account)

Credit Card:

VISA MASTERCARD AMERICAN EXPRESS

Card Number: _____

CCV: _____

Expiration Date: _____

Card Holder's Name: _____

Full Mailing Address: _____



Send to:
Electrostatic Spraying
Systems, Inc.
62 Morrison St.
Watkinsville, GA 30677-2749

ESS recommends sending
your spraygun via a carrier
with tracking.

Print : _____

Sign: _____

Date: _____