





Call for Assistance Buzzer/Strobe Kit P/N 115792

Typical Installation

- Install Buzzer/Strobe, Pullcord Station and Transformer according to the Function Table and Electrical Schematic shown below.
- Always test for proper operation before placing into service.

Technical Specifications (Strobe Light)

Voltage Rating:	24 VAC/VDC @ 100/200 mA	Three Alarm Tones:	Ambulance Siren, Pumper Sound,
Alarm:	At least 88 db	Police Siren Alarm Tone Jumper Settings: 0-0 Ambulance Siren, 1-1 Pumper Sound, 2-2 Police S	Police Siren
Flash Intensity:	1.2 WS		0-0 Ambulance Siren,
Flash Period:	1.5 S		1-1 Pumper Sound, 2-2 Police Siren

Technical Specifications (Transformer)

Class II (UL1585)		Voltage Out:	24 VAC
Voltage In:	120 VAC	Power:	40 VAC

Function Table - Transformer Function Table - Pullcord Station

Color	Function	Wire Col	
Black	120 VAC	Yellow	
White	Neutral	Orange	
Yellow	+ 24 VAC	Brown	
Yellow	- 24 VAC	Brown/White	

Wire Color	Function
Yellow	Common 1
Orange	Normally Open 1
Brown	Common 2
Brown/White	Normally Open 2

Crest Technical Support: 1-800-328-8908


Specifications subject to change without notice. Visit CrestHealthcare.com for additional technical documents.



Call for Assistance Buzzer/Strobe Kit

P/N 115792

Electrical Schematic

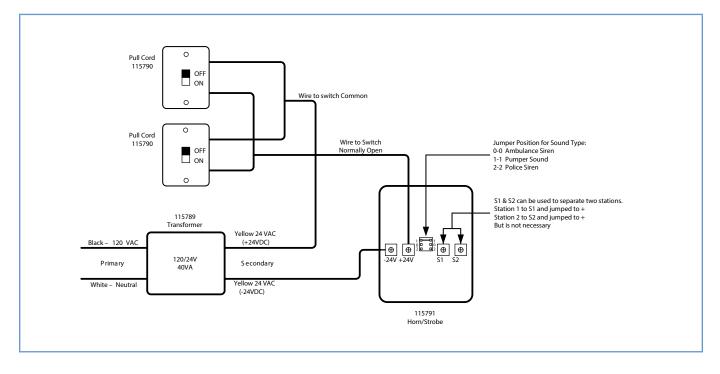

Crest Technical Support: 1-800-328-8908

Specifications subject to change without notice. Visit <u>CrestHealthcare.com</u> for additional technical documents.