

CREST

HEALTHCARE SUPPLY®

P.O. Box 727, 195 Third Street
Dassel, Minnesota 55325-0727

For Technical Assistance
Call Toll-Free U.S. & Canada

1-800-328-8908

Technicians On Duty

©2005 Crest Healthcare Supply

B-39073

CREST

HEALTHCARE SUPPLY®

P.O. Box 727, 195 Third Street
Dassel, Minnesota 55325-0727

For Technical Assistance
Call Toll-Free U.S. & Canada

1-800-328-8908

Technicians On Duty

©2005 Crest Healthcare Supply

B-39073

5343 Series Mushroom Button Emergency Call Stations


(For all Momentary & Latching Models)

INSTALLATION INSTRUCTIONS

CREST

HEALTHCARE SUPPLY®

reliable | responsive | innovative

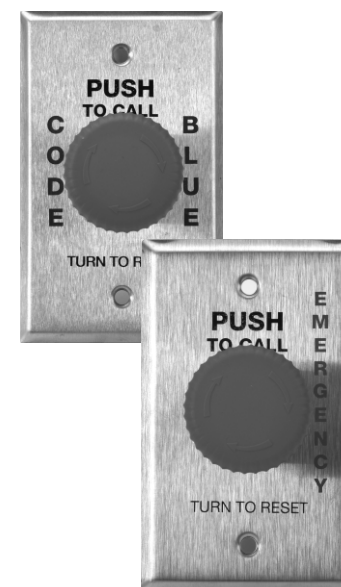

5343 Series Mushroom Button Emergency Call Stations


(For all Momentary & Latching Models)

INSTALLATION INSTRUCTIONS

CREST

HEALTHCARE SUPPLY®

reliable | responsive | innovative

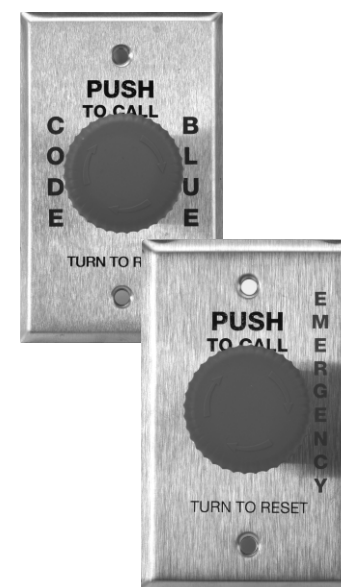

SPECIFICATIONS

ELECTRICAL

Current and voltage rating: 10 Amps, @ 250 Volts AC.

MECHANICAL

Mounting: Fits standard single gang back box.

TYPICAL HOOK-UP

1. The orange and blue wires indicate the normally open contacts.
2. The black and brown wires indicate the normally closed contacts.

Note: Station is available with a maximum of three single pole contacts, in either normally open, normally closed, or combination of normally open and closed switching arrangements.

SPECIFICATIONS

ELECTRICAL

Current and voltage rating: 10 Amps, @ 250 Volts AC.

MECHANICAL

Mounting: Fits standard single gang back box.

TYPICAL HOOK-UP

1. The orange and blue wires indicate the normally open contacts.
2. The black and brown wires indicate the normally closed contacts.

Note: Station is available with a maximum of three single pole contacts, in either normally open, normally closed, or combination of normally open and closed switching arrangements.

POSITION / FUNCTION TABLE

COLOR	Orange	Black	Blue	Brown
Normal Position	Power	Power	Off	On
Depressed Position	Power	Power	On	Off

ELECTRICAL SCHEMATIC

Typical wiring for (Normally Open)



Typical wiring for (Normally Closed)



Note: Use 18 Gauge Stranded Wires

POSITION / FUNCTION TABLE

COLOR	Orange	Black	Blue	Brown
Normal Position	Power	Power	Off	On
Depressed Position	Power	Power	On	Off

ELECTRICAL SCHEMATIC

Switch #1 (Normally Open)



Switch #2 (Normally Closed)



Note: Use 18 Gauge Stranded Wires