


RCA HEALTHCARE SERIES TELEVISION FEATURE OVERVIEW

CLONING SETUP & OPERATION

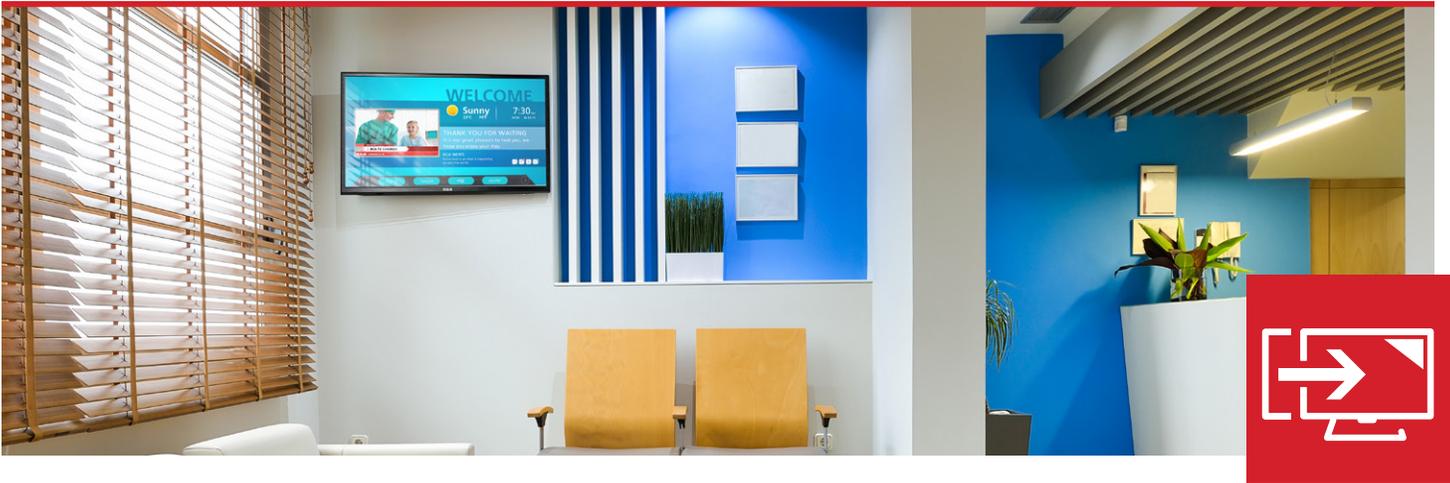

Part 1 | Accessing the Commercial Interface Menu (C.I.M.)

Each RCA Commercial Television has a Commercial Interface Menu that is accessible only by using the TV programming remote. Follow the steps below to access the C.I.M. for the RCA HE Series TV. *Programming remote not included with TVs, contact customer support for a programming remote.*

- | For the RCA HE Series television, use the programming remote **KM38R01**.
- | To access the Commercial Interface Menu you must enter the sequence below.
- | **'Menu'** button followed by **9-6-3-2**, this will take you to the C.I.M.

Part 2 | Using the Clone Feature

Before cloning TV settings plug a USB 2.0 or higher, with at least 500 MB of storage into the back of the TV.

- | Access the **Commercial Interface Menu** using the TV Programming Remote
- | Enter the **Clone Management** section of the C.I.M.
- | Choose the **'Save Settings to USB'** function, which exports clone settings to the USB.
- | Follow prompts and provide an 8 character file name for the .tdf file.
- | Use the right arrow to move through entire file name to save the file to USB.
- | A successful Clone Out will read **'Saving Settings from TV to (FILE NAME) on USB'**.
- | Remove the USB from the TV, and place it into the TV you want to clone settings to.
- | Repeat step 1 & 2 (Access the C.I.M. & Clone Management)
- | Select **'Restore Settings to TV'** function, this imports clone settings from the USB to the TV.
- | When done correctly the TV will restart. Cloning is now complete.

HE Programming Remote



Programming remote for HE Series Televisions.

- | **Part Number KM38R01**
- | **Not Included with TV. Contact Support**

Contact Support

 **Toll Free Phone**
1-800-722-2161 opt. 1
Tech support answered by humans

 **Email**
support@rcacommercialtv.com
Tech support answered by humans

 **Corporate HQ**
5935 W. 84th Street, Suite A
Indianapolis, IN 46278