

CREST

HEALTHCARE SUPPLY®

P.O. Box 727 • 195 Third Street South
Dassel, Minnesota • 55325-0727
www.cresthealthcare.com

For Technical Assistance
Call Toll-Free U.S. & Canada

1-800-328-8908

Technicians On Duty

©202 Crest Health Care

CREST

HEALTHCARE SUPPLY®

INSTALLATION INSTRUCTIONS

Pullcord Call Station - H-721



B-39086

SPECIFICATIONS

ELECTRICAL

Current and Voltage Rating: Resistive load 1.5 amp @ 24 V AC/DC
0.50 amp @ 115 VAC.

Lamp: 28 Volt .04 Amp incandescent type

MECHANICAL


Clips and rotor material:
Brass, silver plated.

Contact Life: 25,000 cycles
minimum.

Index Angle: Spring return and
positive, 30 degrees.

Ship weight: 8 oz.

SCHEMATIC

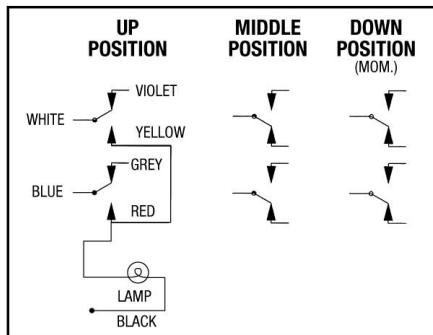

TYPICAL HOOK-UP

Wire colors on position/function correspond to
original station terminals.

POSITION FUNCTION TABLE

Color	Violet	Grey	Red	Yellow	White	Blue	Black
Original Terminal designation	8	4	2	6	7	3	Lamp Common
Up position	On	On	Off	Off			
Middle position	Off	Off	On	On			
Down position (momentary)	Off	Off	On	On			
Green wire is ground							