



Pullcord Station

Crest Replacement for Rauland®

PCS-7351AC

Wire Color/Function Table


Color	Orange	Violet	Black	Red	Yellow	White	Blue
Original Terminal Designation	4	6	T	2	1	5	L
Up Position				OFF	OFF	OFF	OFF
Middle Position				ON	ON	ON	ON
Down Position (Momentary)				ON	ON	ON	ON
Green wire is grounded							

Technical Specifications

Current & Voltage Rating DC:	1.5 A @ 28 VDC
Current & Voltage Rating AC:	0.50 A @ 110 VAC
Terminals:	Brass, silver plated
Index Angle:	Spring return and positive, 30 degrees
Contact Life:	25,000 cycles minimum
Mounting:	Fits standard single gang back box
Plate Size:	4.5" x 2.75" (1-Gang)

Electrical Schematic

Rauland PCS-7351AC Schematic

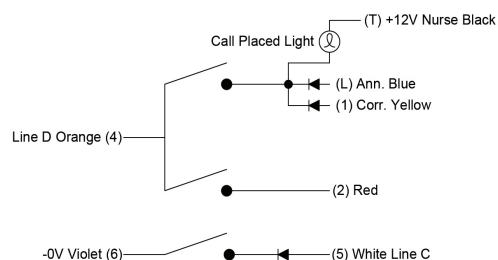

Typical Installation

Original	Replacement
1	Yellow
2	Red
3	Not Used
4	Orange
5	White
6	Violet
L	Blue
T	Black

Crest Technical Support: **1-800-328-8908**

Specifications subject to change without notice.
Visit CrestHealthcare.com for additional technical documents.