


# Wireless Nurse Call

for temporary bed capacity expansions



 powered by  
**inovonics®**

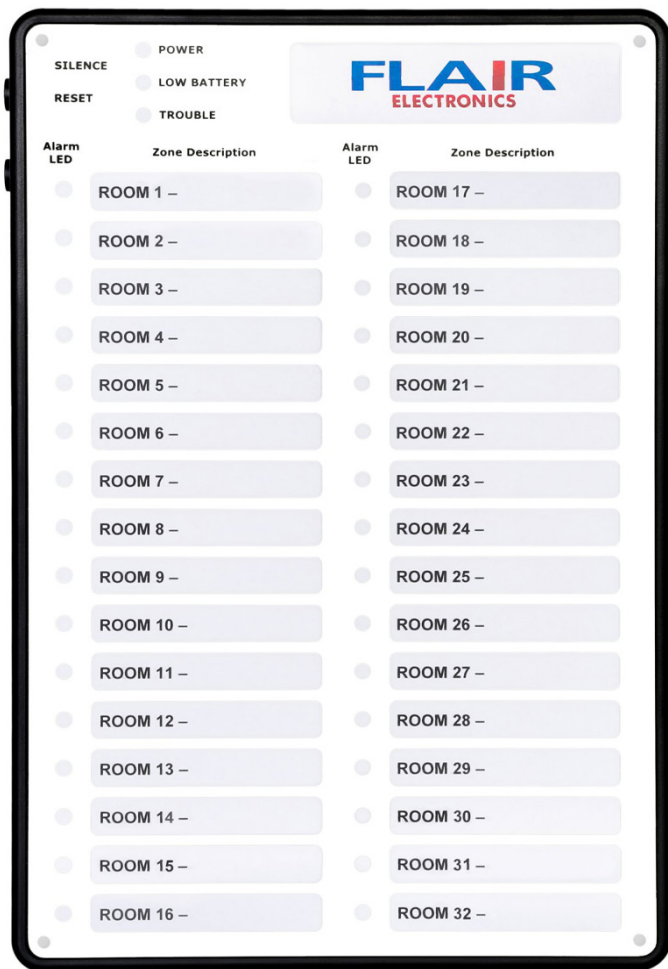

**These and Other Compatible  
Components Available From Crest**

## FLAIR ELECTRONICS WIRELESS ANNUNCIATOR

The easy to install and operate Flair Electronics Wireless Annunciator allows monitoring of up to thirty-two rooms per panel. Multiple panels can be used to monitor additional rooms without special wiring. It has a built-in Inovonics serial receiver and works with most Inovonics transmitters. Uses bright red LEDs and an adjustable volume sounder indicating a call has been placed. Each LED is adjacent to a room label, allowing easy identification of call location, resulting in quicker caregiver response time and higher safety ratings. Two side buttons allow caregivers to Silence then Reset the annunciator once the call has been cleared. Includes UL listed power transformer and UL recognized back-up battery. The paper template allows for easy updates and customization

- Powered by Inovonics®
- Complete your wireless emergency call system with wireless call devices from Crest
- Simple call acknowledge & reset
- Bright red LEDs & adjustable volume sounder for alarm notification
- Internal backup battery with power interruption alarm
- Non-powered output for activating auxiliary call indicator
- High power repeater also available

**Click Here**  
To Order Online Today

**CREST**  
HEALTHCARE®

**Crest Healthcare**

Phone: 800-328-8908 Fax: 800-369-9207  
CrestHealthcare.com