

# **Type 3 Surge Protective Devices**

S1000 & S2000 Series Surge Protective Strips





Leviton's \$1000 and \$2000 Series Surge Protected Strips provide superior protection for everyday use in professional work areas and home offices, protecting computers, peripherals and other electronic devices from damaging surges, voltage transients and noise spikes.

These surge protective strips feature a convenient right angle plug that keeps the cord close to the wall making it easier to install behind furniture and other equipment. The high quality construction and superior electronic circuitry ensures long service life of both the surge protective strip and protected equipment.

The S1000 Series features 6 surge protected NEMA 5-15R outlets while the S2000 Series features 9 surge protected NEMA 5-15R outlets.

### **Features and Benefits:**

- Diagnostic LEDs for Surge Protection, Polarity, and Ground
- Resettable circuit breaker and internal fusing circuit protection
- Audible alarm indicates loss of surge protection
- Multi-line protection (L-N, L-G, N-G)
- Optional Coax and Telco surge protection
- All units feature right angle NEMA 5-15P Plug
- UL 1449 3rd Edition Compliant
- Limited Lifetime Product Warranty and Connected Equipment Protection Policy
- Covered under the True Whole House Connected Equipment Protection Warranty-S1000 Series coverage up to \$10,000 & S2000 Series covered up to \$25,000

# **Specifications**


Catalog Number		\$1000-PS, \$1000-\$15, \$1000-PTC	S2000-PS, S2000-S15, S2000-PTC			
Electrical Specification	าร					
Amperage		15				
Voltage		120				
Frequency		50/60 Hz				
Surge Technology		MOV				
Performance Data						
Maximum Continuous Operating Voltage		150V				
Joules		1010J	2020J			
Maximum Surge Current, Per Mode (L-N)		25kA	62.5kA			
Voltage Protection Rating (VPR)	L-N	600V	500V			
	L-G	700V	700V			
	N-G	700V	700V			
Noise Filtering		-8dB to -25dB (@100K-100MHz)	-10dB to -20dB (@5M-100MHz)			
Material Specifications	5					
Enclosure		ABS Plastic				
Standards and Certifica	ations					
UL 1449 3rd Ed.		cULus Listed				
ANSI/IEEE Category A, B &C		C-62.41 & C-62.45				
Warranty		Limited Lifetime				
Connected Equipment Warranty		Limited Lifetime				
NOM		057				

# **Ordering Information**


Type 3 Surge Protective Strips, 6 & 9 NEMA 5-15R Outlets, Beige									
Catalog #	Maximum Input Current	Joules	Data Protection	Enclosure	Number of Outlets	Cord Length			
S1000-PS	15 Amp	1010J	-	ABS Plastic	6	6 Feet			
S1000-S15	15 Amp	1010J	-	ABS Plastic	6	15 Feet			
S1000-PTC	15 Amp	1010J	RJ-11, Coax	ABS Plastic	6	6 Feet			
S2000-PS	15 Amp	2020]	-	ABS Plastic	9	6 Feet			
S2000-S15	15 Amp	2020J	-	ABS Plastic	9	15 Feet			
S2000-PTC	15 Amp	2020J	RJ-45, Coax	ABS Plastic	9	6 Feet			

#### **Dimensions**

### Common to S1000 Series

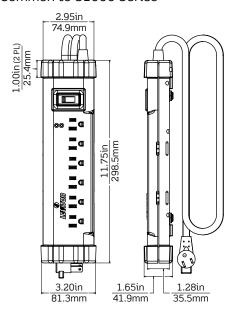

# Common to S2000 Series

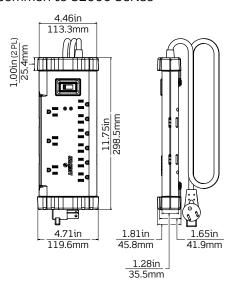

# **Leviton Manufacturing Co., Inc.**

201 North Service Road, Melville, NY 11747

Telephone: 1-800-323-8920 • FAX: 1-800-832-9538

Tech Line (8:30AM-7:00PM E.S.T. Monday-Friday): 1-800-824-3005

# Leviton Manufacturing of Canada, Ltd.

165 Hymus Blvd, Pointe-Claire, QC H9R 1E9

Telephone: 1-800-469-7890 • FAX: 1-800-563-1853

### Leviton S. de R.L. de C.V.

Lago Tana 43, Col. Huichapan, Miguel Hidalgo, CP 11290 México DF

Telephone: (+52) 55-5082-1040 • FAX: (+52) 55-5386-1797 • www.leviton.com.mx

#### **Leviton Middle East, Ltd.**

J/Ali Free Zone, View 19 7th Floor, Office 701 • PO Box 262742 Dubai, UAE Telephone: +971 4 886 4722 • FAX: +971 4 886 4723

## Visit our Website at: www.leviton.com/industrial email: industrial@leviton.com

