


ANNUNCIATOR 900-277

FEATURES

- * 27 LED INDICATORS
- * BUZZER WITH VOLUME CONTROL
- * PLUG-IN CONNECTIONS
- * POWER ON INDICATOR
- * SURFACE OR FLUSH MOUNT
- * LAMP TEST

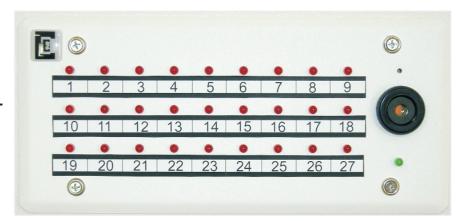

GENERAL

The 900-277 Annunciator can be used as a basic 27 LED indicator with common buzzer, a simple system with flash output, or visual indicator with 900-203 control panel for DS-2000 systems.

MOUNTING

FLUSH - 100-908 5 GANG BOX SURFACE - 100-840 5 GANG BOX

POWER SUPPLY

900-826 24 Volts DC 2.5 Amp



JUMPERS

Buzzer controlled by Point input. Shunt on H9 (1-2) only.

Buzzer intermittent

Shunt on H6 (1-2) and Flash Rate select (1-1) slow, (2-2) mid, (3-3) fast. H-9 is to be left open.

Buzzer controlled by duty output from 900-203 control panel. Shunt on H6 (1-2) only.

To activate lamp test insert small screwdriver through hole above buzzer.

TYPICAL WIRING

