

Features

- UL® 1069 Listed
- Push button calling
- Call-placed indicator
- In-use indicator when intercom audio path is active
- Reset button
- Sensitive speaker/microphone
- Attractive and durable flame-retardant (UL® 94V-0) plastic panel
- May be used as a retrofit for the IR150N station with IH106N backbox; requires two CL207 mounting adapters

Description


The IR150B Staff Station provides for efficient use of the nursing staff by permitting fast reliable communication.

Used with TekTone's Tek-CARE® NC200 and NC150 nurse call systems, the IR150B provides reliable two-way, hands-free communication between the nurse master station and utility room, examination rooms, kitchen, or any other location where staff members may need to originate calls. Calls are placed by use of a momentary push button. Solid-state indicators on the panel indicate that a call has been placed and that the intercom is in use.

Listings



UL® 1069 listed; UL® File Number E71599.

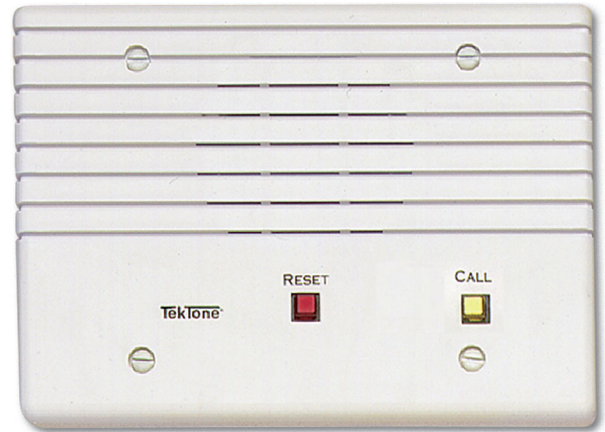

IR150B Staff Station

Specifications

Dimensions:	Height:	4.5"	(119 mm)
	Width:	6.375"	(162 mm)
	Depth:	1.875"	(48 mm)
	Projects:	0.5"	(12.7 mm)
		above mounting surface	
Construction:	Flame-retardant (UL® 94V-0) plastic		
Speaker:	2.5" × 2.5"		
Connections:	Plug-in type		
Housing:	Steel City #H3BD with Steel City #3GC plaster ring, or TekTone #IH353 box with IH352 ring, or equal, or if a smaller box is needed, use ARC-CO #2GB with ARC-CO #3GC ring. Horizontal mount.		

Required Components

Tek-CARE NC200 or NC150 Nurse Call System