

### Features

- UL® 1069 Listed
- Long lasting LEDs
- No bulb replacement required
- Plug-in connector supplied
- Attractive flame-retardant plastic panel
- Addressable station with data signal supervision
- Simplified multiplex wiring

### Description

TekTone's LI386LED Dome/Zone Light with built-in multipurpose station provides visual indication of calls originating from bath, emergency and code call switches when used as a dome light. The LI386LED indicates calls originating from patient and staff stations when used as a zone light. The LI386LED also indicates all calls from the zones to which those stations are assigned and provides communication to and from the central equipment, including the nurse master station and monitor. No controls are provided.


### Listings



UL® 1069 listed; UL® File Number E71599.

### Specifications

Dimensions:	Height:	4.8"	(122 mm)
	Width:	5.0"	(127 mm)
	Depth:	2.755"	(70 mm)
LEDs:	2V 20mA per LED		
Power:	24 VDC		
Finish:	Base is flame-retardant (UL® 94HB) plastic. Lens is flame-retardant translucent polycarbonate plastic.		
Housing:	Fits standard one- or two-gang box with one-or two-gang ring.		

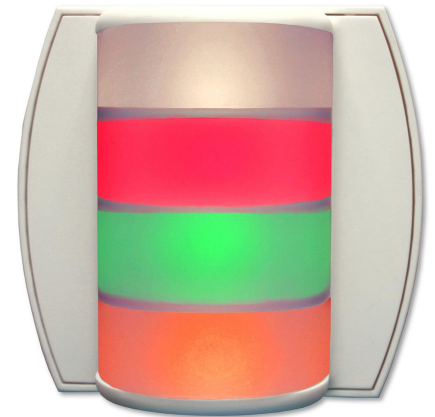

LI386LED Addressable Dome/Zone Light

### Required Components

Tek-CARE®300II Nurse Call System