

PACIFIC

PACIFIC ELECTRONICS CORPORATION

10200 US ROUTE 14

Woodstock, IL. 60098

TELEPHONE (815)206-5450

FAX (815)206-5460




General:

The "CALL-FOR-AID" system is designed for use in public restrooms, especially for handicapped areas. Where call-for-help or emergency switches are required: Components may be purchased separately or as a kit.

Handicapped/CALL-FOR-AID Kit P/N LV-24

Kit Contains:

- 1- Pullcord Station 206-2
- 1- Dome Light 302-2B
- 1- Transformer

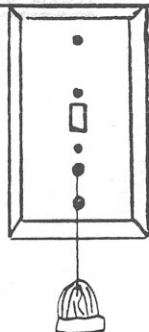

Pullcord Station 206-2 P/N 120606-01


The 206-2 emergency pullcord station provides emergency call placement with reset capability only at the call initiating station.

Material: Satin Stainless Steel Overall Dimension 4 1/2"H X 2 3/4" W
Unit Mounts on a single gang electrical box.



Pushbutton Station 206-2S P/N 120606-24

Same as above with pushbutton instead of pullcord

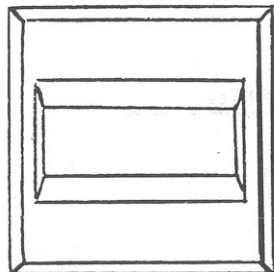

Dome Light 302-2B P/N 945075-03

The dome light is designed to be installed over the door(s) outside the restroom(s). Each unit contains a buzzer for an audible alarm and two lamps (GE #1820, 24V bayonet type) for call indications which may be used for one or two separate areas. For two separate areas, dome light must be mounted horizontally to create a left and a right indication.


Material: Satin Stainless Steel Overall Dimensions: 4 1/2"H X 4 1/2"W
Unit mounts on a single gang electrical box.



Remote Buzzer 1110 P/N 111101-01

The remote buzzer is for applications where an emergency alarm is required at an additional location(s).

Material: Satin Stainless Steel
Overall Dimensions 4 1/2"H X 2 3/4"W
Unit mounts on a single gang electrical box.

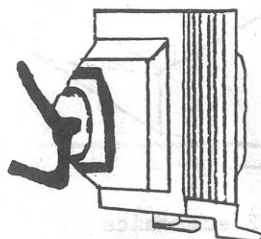

Transformer P598

Provides AC current to the system.

Overall Dimensions 2 1/8"H X 2 1/2"W X 2 1/4" D

Transformer has fitting to mount in knockout of standard outlet box.

Specification: Primary 110V @ 60Hz

Secondary Tapped 16 & 24 VAC, 30V.A.